

oxy.IQ

Panametrics Oxygen Transmitter

User's Manual



imagination at work

910-296 Rev. B
March 2015

GE

Measurement & Control

oxy.IQ

Panametrics Oxygen Transmitter

User's Manual

910-296 Rev. B

March 2015



www.ge-mcs.com

©2015 General Electric Company. All rights reserved.
Technical content subject to change without notice.

[no content intended for this page]

Information Paragraphs

Note: *These paragraphs provide additional information about the topic which is helpful but is not essential to proper completion of the task.*

Important: *These paragraphs provide emphasis to instructions that are essential to proper setup of the equipment. Failure to follow these instructions carefully may cause unreliable performance.*



WARNING! Indicates a potentially hazardous situation which can result in serious personal injury or death, if it is not avoided.



CAUTION! Indicates a potentially hazardous situation which can result in minor or moderate injury to personnel or damage to the equipment, if it is not avoided.

Safety Issues



WARNING! It is the responsibility of the user to make sure all local, county, state and national codes, regulations, rules and laws related to safety and safe operating conditions are met for each installation.

Auxiliary Equipment

Local Safety Standards

The user must make sure that he operates all auxiliary equipment in accordance with local codes, standards, regulations, or laws applicable to safety.

Working Area



WARNING! Auxiliary equipment may have both manual and automatic modes of operation. As equipment can move suddenly and without warning, do not enter the work cell of this equipment during automatic operation, and do not enter the work envelope of this equipment during manual operation. If you do, serious injury can result.



WARNING! Make sure that power to the auxiliary equipment is turned OFF and locked out before you perform maintenance procedures on the equipment.

Qualification of Personnel

Make sure that all personnel have manufacturer-approved training applicable to the auxiliary equipment.

Personal Safety Equipment

Make sure that operators and maintenance personnel have all safety equipment applicable to the auxiliary equipment. Examples include safety glasses, protective headgear, safety shoes, etc.

Unauthorized Operation

Make sure that unauthorized personnel cannot gain access to the operation of the equipment.

Environmental Compliance

Waste Electrical and Electronic Equipment (WEEE) Directive

GE Measurement & Control Solutions is an active participant in Europe's *Waste Electrical and Electronic Equipment (WEEE)* take-back initiative, directive 2012/19/EU.



The equipment that you bought has required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.

In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems. Those systems will reuse or recycle most of the materials of your end life equipment in a sound way.

The crossed-out wheeled bin symbol invites you to use those systems.

If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration.

Visit <http://www.ge-mcs.com/en/about-us/environmental-health-and-safety/1741-weee-reg.html> for take-back instructions and more information about this initiative.

[no content intended for this page]

Chapter 1. Features and Capabilities

1.1	Introduction	1
1.2	Hazardous Location Certifications	2
1.3	Applications	2
1.4	Features.....	3
1.5	Sample Systems	4

Chapter 2. Installation

2.1	Mounting the oxy.IQ.....	5
2.2	Wiring the oxy.IQ.....	8
2.2.1	Longer Cable Lengths.....	9
2.3	Installing an Oxygen Sensor	10

Chapter 3. Initial Setup & Operation

3.1	The oxy.IQ Display and Keypad	13
3.2	The oxy.IQ Menu Map	14
3.3	Adjusting and Calibrating the oxy.IQ	14
3.3.1	Selecting the Output Range	15
3.3.2	Trimming the Analog Output	16
3.3.3	Air Calibration	17
3.3.4	Span Gas Calibration	19

Chapter 4. User Programming

4.1	Introduction	21
4.2	The Calibration Menu	21
4.2.1	Air	21
4.2.2	Span Gas.....	21
4.2.3	Sensor Life	22
4.3	The Display Menu	23
4.3.1	Select the O2 Parameter	23
4.3.2	Display the Sensor Range	24
4.3.3	Adjust the Contrast	24
4.4	The Output Menu	25
4.4.1	Range.....	25
4.4.2	Trim.....	25
4.4.3	Error Type	25
4.4.4	Error Output.....	27

Chapter 5. The Service Menu

5.1	Menu Map & Service Passcode.....	29
5.2	Entering the Service Menu.....	29
5.2.1	Diagnostics.....	30

Chapter 6. Specifications

6.1	Intrinsically Safe (IS) Installation.....	31
6.1.1	Power Requirements.....	31
6.1.2	Cable	31
6.1.3	Output	31
6.2	Non-Incendive (Div 2) and General Purpose Installation	31
6.2.1	Cable	31
6.2.2	Power Requirements.....	31
6.3	All Installations.....	32
6.3.1	Process Wetted Materials	32
6.3.2	User-Selectable Measurement Ranges.....	32
6.3.3	Accuracy.....	32
6.3.4	Repeatability	33
6.3.5	Resolution.....	33
6.3.6	Linearity.....	33
6.3.7	O2 Sensor Operating Temperature	33
6.3.8	Sample Pressure.....	33
6.3.9	Atmospheric Pressure Effect.....	33
6.3.10	Process Connection.....	33
6.3.11	Dimensions.....	33
6.3.12	Weight	33
6.3.13	Sample Flow Rate	33
6.3.14	Electrical Classification.....	34
6.3.15	European Compliance	34
6.3.16	Product Label.....	35

Appendix A. Outline and Installation Drawings	37
Appendix B. Menu Maps	45
Appendix C. Order String	49
Appendix D. Certifications	51
D.1 ATEX EC-Type Examination Certificate	52
D.2 ATEX IECEx MAM Ex Certificate.	56
D.3 Canadian Certificate of Compliance	58
D.4 FM Certificate of Compliance	60
D.5 IECEx Certificate of Conformity	62
Addendum A. oxy.IQ Safety Manual.	71
Addendum B. Declaration of Conformity	77

[no content intended for this page]

Chapter 1. Features and Capabilities

1.1 Introduction

The **oxy.IQ Panametrics Oxygen Transmitter** (see *Figure 1* below) is a highly reliable and cost-effective two-wire, loop-powered transmitter with a linearized 4 to 20 mA output. It measures oxygen content in ten ppm ranges (10, 20, 50, 100, 200, 500, 1000, 2000, 5000 and 10000 ppm) and eight percentage ranges (1, 2, 5, 10, 21, 25, 50 and 100%). All ranges are user-selectable. This compact transmitter uses proven sensor technology to accurately measure O₂ in a variety of gases, even in hazardous (classified) locations.



Figure 1: oxy.IQ

1.2 Hazardous Location Certifications

When equipped with an optional *zener barrier* or *galvanic isolator*, the oxy.IQ can be mounted in a hazardous (classified) location. The oxy.IQ with Intrinsically Safe option is certified to USA, Canadian, ATEX, and international IECEx IS requirements. The standard oxy.IQ is certified to USA, Canadian, EU ATEX and International IECEx Div2/Zone 2 Non Incendive requirements.

1.3 Applications

Some typical applications for the **oxy.IQ** Panametrics oxygen transmitter include the following:

- Glove box purge and leak detection
- Natural gas
- Semiconductor wafer machines
- Coating process machines
- Membrane air separators
- Inert welding gases
- Pure gaseous hydrocarbon streams
- Process monitoring of gaseous monomers
- Heat treating and bright annealing

1.4 Features

The **oxy.IQ** oxygen sensor is an advanced galvanic fuel cell that provides superior performance, accuracy, stability and long life. The cell's innovative design eliminates the potential for negative signal output and reduces sources of contamination.

The cell is unaffected by other background gases or hydrocarbons and is compatible with acidic gases (**OX-2** and **OX-4** cells). Recovery from air at low ppm levels takes just a few minutes. Because the cell is self-contained, minimal maintenance is required. There is no electrolyte to change and no electrodes to clean.

The **oxy.IQ** offers the following features:

- Two-wire, loop-powered, 4 to 20 mA transmitter
- Display with keypad
- Intrinsically-safe option
- Proven galvanic fuel cell O₂ sensor technology
- User-selectable ranges for ppm and percent oxygen
- User-friendly and intuitive user interface with diagnostics
- Microprocessor-based, all-digital technology for reliable operation
- Low maintenance, economical and compact
- Sensor failure output error
- Sensor lifetime indication
- NAMUR error indication

1.5 Sample Systems

In addition to the standard features and options, GE offers a full line of sample handling systems for a variety of applications. If needed, GE can design and build a sample conditioning system to meet unique application requirements. Please contact GE for details.

Table 1 below lists some background gases that can interfere with the oxygen sensor.

Table 1: Oxygen Sensor Interference Gases

Gas	OX-1 & 5 ppm	OX-2 ppm	OX-3 %		OX-4 %	
	Cont.	Cont.	Cont.	Int. (1)	Cont.	Int.
H ₂ S	<5 ppm	<10 ppm	0.0005 %	0.01 %	0.001 %	0.1 %
SO ₃	<10 ppm	<10 ppm	0.01 %	0.1 %	0.01 %	0.1 %
SO ₂	<10 ppm	(3)	0.01 %	0.1 %	(3)	(3)
HCl	<1000 ppm	(3)	0.1 %	1.0 %	(3)	(3)
HCN	<1000 ppm	(3)	0.1 %	1.0 %	(3)	(3)
CO ₂	<1000 ppm	(3)	0.1 %	20 &	(3)	(3)
NO ₂	(2)	(2)	(2)	(2)	(2)	(2)
Cl ₂	(2)	(2)	(2)	(2)	(2)	(2)
Cont. = Continuous, Int. = Intermittent						
(1) Recommended maximum exposure 30 minutes, followed by flushing with ambient air for an equal period.						
(2) Minimal effect on sensor performance, but produces signal interference of 1:2 ratio for ppm levels only (e.g., 100 ppm NO ₂ looks like 200 ppm O ₂).						
(3) Minimal effect on sensor performance						

Chapter 2. Installation

2.1 Mounting the oxy.IQ

To install the oxy.IQ into the process or sample system, refer to *Figure 9 on page 38* or *Figure 2* below and proceed to the next page.

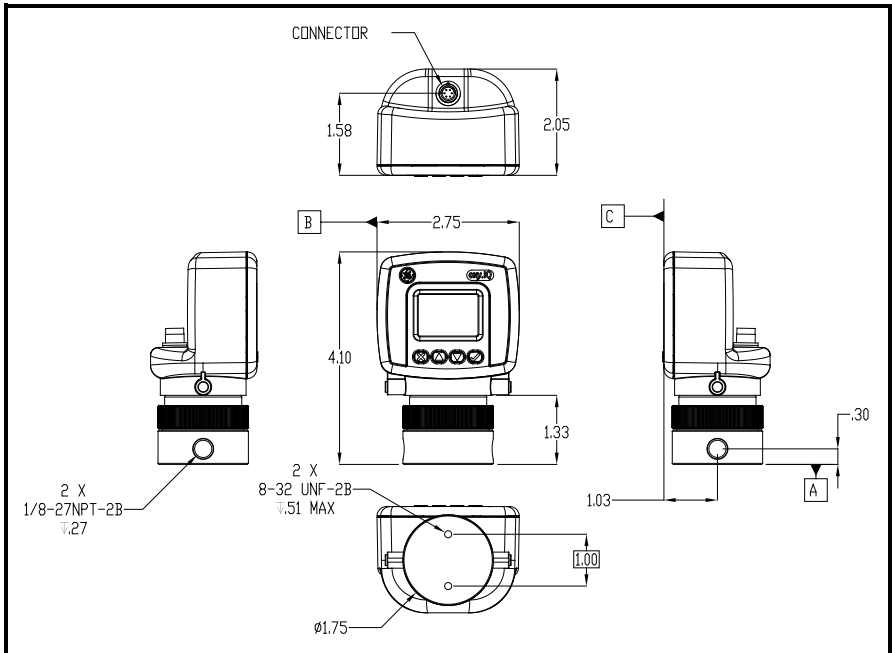


Figure 2: Outline and Installation Drawing

Note: To avoid collecting condensate that may damage the oxygen sensor, mount the oxy.IQ in an upright position, with the sensor manifold below the electronics module.

Mounting the oxy.IQ (cont.)

Install the oxy.IQ by completing the following steps:

1. Remove the oxy.IQ and the separately-packaged oxygen sensor (see *Figure 3* below) from the shipping container. Keep the shipping container and packaging material for possible future use.

Important: *DO NOT open the oxygen sensor package until you are ready to install the sensor.*

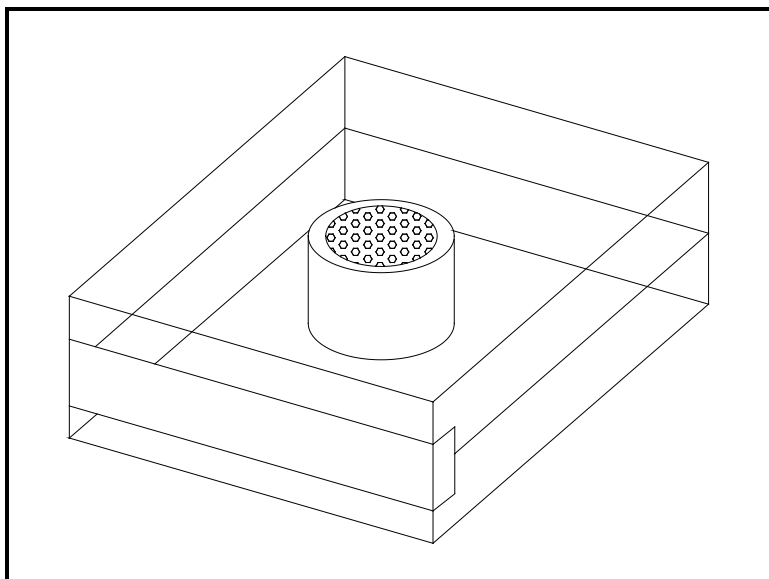


Figure 3: Packaged Oxygen Sensor

2. Remove the sensor manifold by unscrewing it from the blue knurled nut on the sensor base at the bottom of the electronics module.

Mounting the oxy.IQ (cont.)

Important: *The maximum operating pressure for the oxy.IQ is 10 psi, and the burst pressure of the unit is 200 psi. Be sure the sample conditioning system is designed to maintain the oxy.IQ pressure below these limits, and that the oxy.IQ outlet is vented to atmosphere during operation and calibration.*

3. Using PTFE tape as a sealant, connect the sample gas inlet and outlet to the 1/8" NPT ports on the sensor manifold (see *Figure 4* below). Either port may be used as the inlet or the outlet, as the direction of flow does not matter.

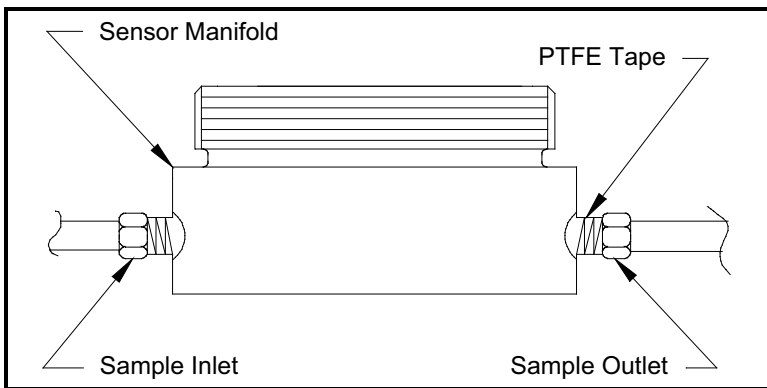


Figure 4: Sensor Manifold Installation

2.2 Wiring the oxy.IQ

To wire the oxy.IQ, refer to *Figure 14 on page 43*, then proceed as follows:



WARNING! For IS (Intrinsically Safe) applications, the oxy.IQ must be installed with a zener barrier (see the top of *Figure 14 on page 43*). Also, for installations in a hazardous location, the blue IS cable (p/n 704-1318-02, 10) must be used.

1. Attach the appropriate cable to the oxy.IQ (see *Figure 5* below). Be sure to align the white arrow on the cable connector with the white arrow on the oxy.IQ connector, and then push the top of the cable connector straight down onto the mating connector on the rear of the electronics module until you hear it click into place.

Important: *Do not rotate the cable connector during installation (it is not threaded) and do not hold the connector by its bottom section while pushing it down into place.*

Important: *To remove the cable, grasp the bottom section of the connector (the part with the white arrow) and pull it straight up until the cable comes loose. **DO NOT** twist the connector either by hand or with any tool during removal.*

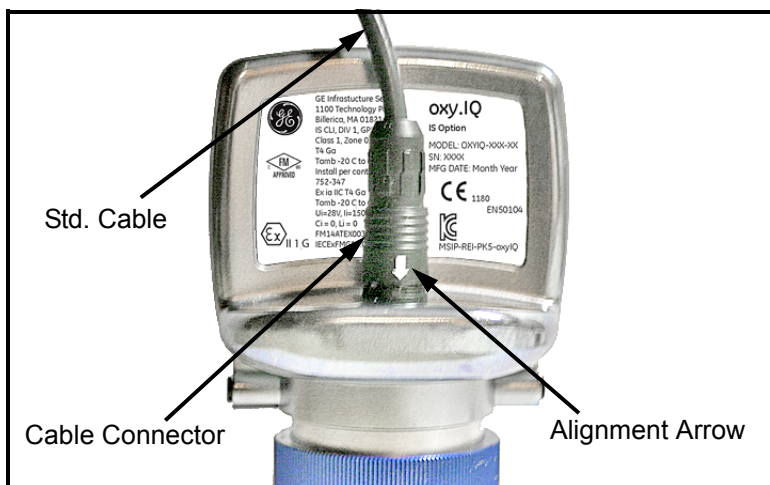


Figure 5: oxy.IQ Cable and Connector

Wiring the oxy.IQ (cont.)

2. Connect the flying lead end of the cable as shown in the wiring diagram, according to one of the following conditions:

- **No Zener Barrier or Galvanic Isolator:**

For use in non-hazardous areas or Div 2 hazardous areas (certification pending).

- **With Zener Barrier or Galvanic Isolator:**

Required for use in hazardous areas.

Important: *To remove the cable from the oxy.IQ electronics module, simply pull straight up on the lower section of the cable connector as close to the oxy.IQ body as possible. Do not pull on the cable or the upper portion of the cable connector, and do not try to unscrew the cable connector.*

2.2.1 Longer Cable Lengths

GE offers cables in 2 m and 10 m standard lengths. Longer cable lengths may be used with the oxy.IQ, but these are not available from GE. If you require a longer cable, refer to the following figures for the required cable specifications and construct your own cable for splicing onto the standard GE cable:

- **Standard Cable:** *Figure 10 on page 39 and Figure 11 on page 40*
- **IS Cable:** *Figure 12 on page 41 and Figure 13 on page 42*

2.3 Installing an Oxygen Sensor

To install a new or replacement oxygen sensor in the oxy.IQ, refer to *Figure 6* below and complete the following steps:

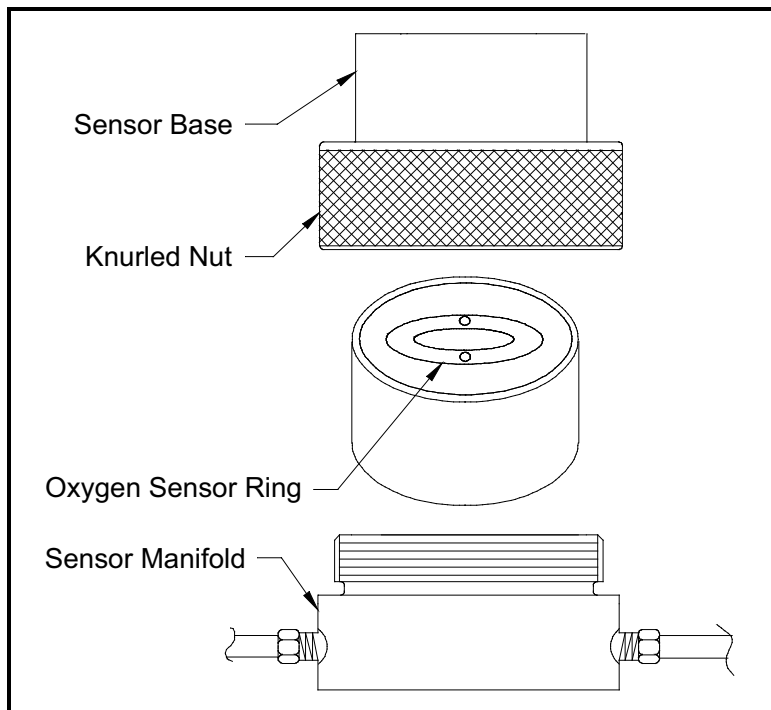


Figure 6: Oxygen Sensor Installation

1. Disconnect the power from the oxy.IQ.
2. Loosen the blue knurled nut and remove the oxy.IQ electronics module from the sensor manifold. If a previous oxygen sensor is already in place, remove and discard it.

Installing an Oxygen Sensor (cont.)

3. Apply power to the unit. The screen will display "INITIALIZING PLEASE WAIT" for a few seconds before it begins to display measurement data.

Note: *Before continuing with the installation, become familiar with the procedures for programming and calibrating the oxy.IQ discussed in Chapter 3, Initial Setup & Operation.*

4. Trim the 4-20 mA analog output and set the range to 0-25% oxygen.
5. Open the airtight package (see *Figure 3 on page 6*) and remove the oxygen sensor from the package. To maintain the oxygen sensor's energy level, remove the red grounding tab and **immediately** install the sensor in the oxy.IQ
6. Orient the sensor so that its gold-plated electrodes are facing the spring-loaded contact pins in the sensor base (see *Figure 6 on page 10*). Firmly press the oxygen sensor into the sensor base at the bottom of the oxy.IQ electronics module.
7. Perform an air calibration on the new oxygen sensor at this time. On the 0-25% oxygen scale, a properly calibrated oxygen sensor shows a reading of 20.9% on the display and generates a current of 17.4 mA at the 4-20 mA analog output terminals.
8. Using the blue knurled nut, attach the oxy.IQ electronics module with the calibrated oxygen sensor to the sensor manifold. Rotate the display as desired and then hand-tighten the blue knurled nut.

Important: *Make sure that the O-ring on the top of the sensor manifold is in place and undamaged. If necessary, contact GE for a replacement.*

Installing an Oxygen Sensor (cont.)

9. Begin the flow of the process gas. The analog output reading will drop as the oxygen sensor adjusts to the reduced oxygen level. During this time, reset the range as required.
10. For improved accuracy in the ppm oxygen ranges, a span gas calibration should now be performed (see “*Span Gas Calibration*” on page 19).

Important: *Sensor life is dependent on the application. High oxygen concentrations and contaminants such as acidic gases will shorten the sensor life.*

Chapter 3. Initial Setup & Operation

3.1 The oxy.IQ Display and Keypad

All programming of the oxy.IQ is done via the front panel keypad and display, as illustrated below.

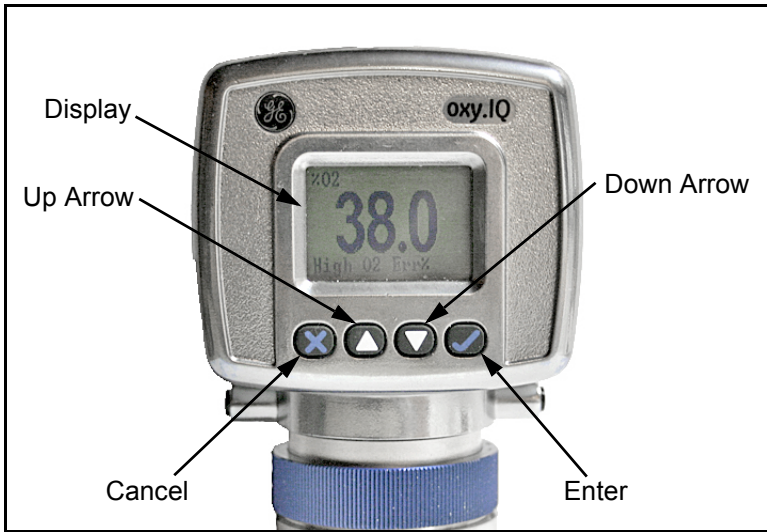






Figure 7: oxy.IQ Display and Keypad

The front panel components perform the following functions:

- **Display** - Data measurements and the programming menus and options are shown on the LCD display screen.
-  **Enter** - While in measurement mode, press this key to enter the Main Menu. While in the *Main Menu*, press this key to save an entry and advance to the next screen.
-  **Cancel** - While in the *Main Menu*, press this key to cancel an entry and to return to the previous screen.
-  and  **Keys** - In the *Main Menu*, use these keys to move the cursor between rows one row at a time in the direction indicated.



3.2 The oxy.IQ Menu Map


As an aid in navigating through the *Main Menu*, a complete *Menu Map* of the user program is shown in *Figure 15 on page 46*. Refer to this figure as needed while programming the oxy.IQ.

The oxy.IQ Main Menu consists of the following submenus:

- Calibration Menu (no passcode required)
- Display Menu (no passcode required)
- Output Menu (no passcode required)
- Service Menu (factory service passcode required)

To enter the *Main Menu* from normal display mode, simply press the

 **Enter** key at any time. To leave the *Main Menu* and return to measurement mode, press the  **Cancel** key.

Note: *Depending on how deep you are in the menu structure, it may be necessary to press the  **Cancel** key more than once to return all the way back to measurement mode.*

3.3 Adjusting and Calibrating the oxy.IQ

Upon startup, the following five-step adjustment and calibration procedure must be performed on the oxy.IQ:

1. Select the desired output range.
2. Trim the low (4 mA) and high (20 mA) analog outputs.
3. Upon installation of a new oxygen sensor, calibrate the unit with air for either a ppm or % sensor.
4. For ppm sensors only, purge the sensor with a low ppm oxygen gas.
5. For all subsequent calibrations, use a span gas that is appropriate for the sensor and range selected.

3.3.1 Selecting the Output Range

To select the desired measurement range, complete the following steps:









1. Press the  **Enter** key to enter the *Main Menu*.
2. Press the  key twice and then press the  **Enter** key to enter the *Output* menu.
3. Press the  **Enter** key to select the *Range* menu option.
4. Use the  and  keys to scroll through the available options, as listed in *Table 2* below.

Table 2: Available Output Ranges

Units	Span Value
% O ₂	1, 2, 5, 10, 21, 25, 50, 100
ppm O ₂	10, 20, 50, 100, 200, 500, 1000, 2000, 5000, 10000

5. After selecting the desired output range, press the  **Enter** key to save the selection. Then, press the  **Cancel** key to return to the *Output* menu.






3.3.2 Trimming the Analog Output

To trim the analog output, calibrate the low (4 mA) end of the output then the high (20 mA) end of the output.





IMPORTANT: *The 4 mA and 20 mA adjustments interact with each other. Therefore, recheck the trim after the procedure has been completed.*

3.3.2a Preparing to Trim the Analog Output

Prepare to trim the analog output as follows:

1. Connect an ammeter in series with the positive oxy.IQ power supply lead, to monitor the analog output current.
2. Press the  **Enter** key to enter the *Main Menu*.
3. Press the  key twice and then press the  **Enter** key to enter the *Output* menu.
4. Press the  key and then press the  **Enter** key to enter the *Trim* menu.

3.3.2b Trimming the Analog Output Low (4 mA) End

1. Press the  **Enter** key to enter the *4 mA Trim* menu, and the analog output is driven to about 4 mA.
2. Use the  and  keys to adjust the analog output up or down, until it equals 4.00 ± 0.01 mA.
3. Press the  **Enter** key to save the trim adjustment and return to the *Trim* menu.

3.3.2c Trimming the Analog Output High (20 mA) End

1. Press the ▼ key and then press the ✓ Enter key to enter the *20 mA Trim* menu, and the analog output is driven to about 20 mA.
2. Use the ▲ and ▼ keys to adjust the analog output up or down, until it equals 20.00 ± 0.01 mA.
3. Press the ✓ Enter key to save the trim adjustment and return to the *Trim* menu.

3.3.2d Completing the Trim Procedure

1. Repeat both the low (4 mA) end and high (20 mA) end analog output trimming steps until no further trimming adjustments are required.
2. Press the ✕ Cancel key twice to return to the *Main Menu*.

3.3.3 Air Calibration

An air calibration is always recommended upon installation of a new oxygen sensor. However, because of the non-linearity of the oxygen sensor, a span gas calibration (see the next section) can also be performed to ensure a faster and more accurate calibration for the ppm ranges.








CAUTION! The useful life of ppm sensors will also be extended by minimizing exposure of the sensor to air.

To perform an air calibration, complete the following steps:

1. Press the ✓ Enter key to enter the *Main Menu*.
2. Press the ✓ Enter key to enter the *Calibration* menu.
3. Press the ✓ Enter key to select the *Air* menu option.
4. Proceed to the appropriate section, depending on whether you are calibrating a new sensor or recalibrating an existing sensor.

3.3.3a Calibrating a New Sensor




For a new sensor, continue the air calibration procedure as follows:

1. Press the  key and then press the  **Enter** key to select the *YES* menu option.
2. Press the  **Enter** key to acknowledge that you are resetting the *sensor lifetime clock*.
3. As instructed, remove the sensor manifold to expose the new oxygen sensor to ambient air for about two minutes. Then, press the  **Enter** key to continue.
4. A message indicating that the calibration is in progress will be displayed, and then the calibration data will be shown. At that time, press the  **Enter** key to save the calibration data and return to measurement mode.

Note: *A second calibration of the new sensor should be performed within 1-2 days of the first calibration.*

3.3.3b Recalibrating an Existing Sensor

For an existing sensor, continue the air calibration procedure as follows:

1. Press the  **Enter** key to select the *NO* menu option.
2. As instructed, remove the sensor manifold to expose the oxygen sensor to ambient air for about two minutes. Then, press the  **Enter** key to continue.
3. A message indicating that the calibration is in progress will be displayed, and then the calibration data will be shown. At that time, press the  **Enter** key to save the calibration data and return to measurement mode.

3.3.4 Span Gas Calibration









Before beginning the span gas calibration, make sure the oxy.IQ is indicating an O₂ level less than the span gas value, to ensure an accurate calibration. Then, start the flow of the span gas to the sensor. For accurate calibration, the span gas should have an oxygen content of 70-90% of the range being calibrated.

To perform the span calibration, complete the following steps:

1. Use the equation below to calculate the expected mA output that corresponds to the known oxygen content of the span gas:

$$4.0 + 16.0 \times \frac{\text{Span Gas ppm}}{\text{Full Range ppm}} = \text{mA Output}$$

For example, if the span gas contains 80 ppm oxygen and the 0-100 ppm range is being calibrated, the analog output should equal $4 + 16 \times (80/100) = 16.8 \text{ mA}$.

2. If you have not done so already, start the flow of span gas to the sensor and allow both the 4-20 mA output reading and the display reading to stabilize.
3. After the reading has stabilized, press the  **Enter** key to enter the *Main Menu*.
4. Press the  **Enter** key to enter the *Calibration* menu.
5. Press the  key and then press the  **Enter** key to select the *Span Gas* menu option.
6. Press the  and  keys until the measurement agrees with the span calibration gas value.
7. Confirm that the reading on the display has stabilized, and press the  **Enter** key to save the calibration. Then, press the  **Cancel** key twice to return to measurement mode.

[no content intended for this page]

Chapter 4. User Programming

4.1 Introduction

IMPORTANT: *The oxy.IQ Service menu is for use by qualified service personnel only and requires a special passcode for access. That menu is not discussed in this chapter.*

This chapter provides instructions for programming all of the oxy.IQ menu options available to the user, which can be accessed without the use of a passcode. These menu options are found in the following *Main Menu* submenus:

- Calibration Menu
- Display Menu
- Output Menu

While programming these menus, refer to the menu map in *Figure 15 on page 46*.

Note: *The menu options for initial setup are described in Chapter 3, Initial Setup & Operation, and are only referenced in this chapter.*

4.2 The Calibration Menu

Proceed to the appropriate section to program the desired menu option.

4.2.1 Air







See “*Air Calibration*” on page 17.

4.2.2 Span Gas

See “*Span Gas Calibration*” on page 19.

4.2.3 Sensor Life

To read the sensor life, complete the following steps:








1. Press the  **Enter** key to enter the *Main Menu*.
2. Press the  **Enter** key to enter the *Calibration* menu.
3. Press the  key three times and then press the  **Enter** key to enter the *Sensor Life* menu.
4. The number of days your sensor has been in use is displayed. When you have finished reading the information, press the  **Enter** key to return to the *Calibration* menu.
5. Press the  **Cancel** key twice to return to measurement mode.

4.3 The Display Menu

Proceed to the appropriate section to program the desired menu option.









4.3.1 Select the O2 Parameter

To select the O2 parameter for display, complete the following steps:

1. Press the  **Enter** key to enter the *Main Menu*.
2. Press the  key once and then press the  **Enter** key to enter the *Display* menu.
3. Press the  **Enter** key to enter the *O2* menu.
4. Use the  and  keys to select the desired O2 range to be displayed:
 - ppm only
 - % only
 - Auto Select (automatically displays the appropriate range)
5. Press the  **Enter** key to confirm your choice and return to measurement mode.








4.3.2 Display the Sensor Range

To select whether or not the O₂ range of the installed sensor is displayed, complete the following steps:

1. Press the  **Enter** key to enter the *Main Menu*.
2. Press the  key once and then press the  **Enter** key to enter the *Display* menu.
3. Press the  key once and then press the  **Enter** key to enter the *Display Range* menu.
4. Use the  and  keys to select the desired option:
 - On - the O₂ range is displayed at the bottom of the screen
 - Off - the O₂ range is not displayed at the bottom of the screen
5. Press the  **Enter** key to confirm your choice and return to measurement mode.

4.3.3 Adjust the Contrast

To adjust the display contrast, complete the following steps:

1. Press the  **Enter** key to enter the *Main Menu*.
2. Press the  key twice and then press the  **Enter** key to enter the *Contrast* menu.
3. Use the  and  keys to adjust the contrast to the desired value, then press the  **Enter** key to save the new value.
4. Press the  **Cancel** key twice to return to measurement mode.

4.4 The Output Menu

Proceed to the appropriate section to program the desired menu option.

4.4.1 Range






See “*Selecting the Output Range*” on page 15.

4.4.2 Trim




See “*Trimming the Analog Output*” on page 16.

4.4.3 Error Type

To select the process conditions that will activate an on-screen warning and send an alarm to the analog output device, complete the following steps:


1. Press the  **Enter** key to enter the *Main Menu*.
2. Press the  key twice and then press the  **Enter** key to enter the *Output* menu.
3. Press the  key twice and then press the  **Enter** key to enter the *Error Type* menu.


4.4.3 Error Type (cont.)

4. Use the  and  keys to select the desired option and then press the  **Enter** key to activate that error type. A check mark will appear next to the selected option to indicate that it is activated. The following options are available, and you may activate as many of these options as you wish.

Note: *Only the first four options are displayed on the screen upon entering this menu. When you scroll down to the fourth option (Low Temp), a down arrow to the right of this option indicates that an additional screen of options is available.*









- High O2
- Low O2 (programmable)
- High Temp
- Low Temp (programmable)
- Temp Comp (listed on second screen of options)

Note: *Pressing the  **Enter** key on an error type that has already been activated, will deactivate that option and remove the check mark.*

5. Press the  **Cancel** key three times to return to measurement mode.


4.4.4 Error Output


To select the desired output value that will be sent to the analog output device upon an error, complete the following steps:

1. Press the  **Enter** key to enter the *Main Menu*.
2. Press the  key twice and then press the  **Enter** key to enter the *Output* menu.
3. Press the  key three times and then press the  **Enter** key to enter the *Error Output* menu.
4. Use the  and  keys to select the desired option and then press the  **Enter** key to activate that error output. A check mark will appear next to the selected option to indicate that it is activated. The following options are available, and you may activate only one option at a time.

Note: *Only the first four options are displayed on the screen upon entering this menu. When you scroll down to the fourth option (NAMUR), a down arrow to the right of this option indicates that an additional screen of options is available.*

- None (no error output is generated)
- Low (an output below 4 mA is generated)
- High (an output above 20 mA is generated)
- Value (an error output at a programmable fixed value is generated)
- NAMUR (listed on second screen of options)

Note: *Pressing the  **Enter** key on a different error output will automatically deselect any previously selected output.*

5. Press the  **Cancel** key three times to return to measurement mode.

[no content intended for this page]

Chapter 5. The Service Menu



CAUTION! The *Service Menu* is intended for use by qualified service personnel only, and access to this menu requires entry of the service passcode. Misuse of the information in this menu may significantly impair the accuracy and performance of your oxy.IQ and may cause it to fail to meet its published specifications.







5.1 Menu Map & Service Passcode

For help in navigating through the *Service Menu*, refer to the menu map shown in *Figure 16 on page 47*. The *service passcode* required for access to the oxy.IQ *Service Menu* is:

7378

5.2 Entering the Service Menu

To enter the *Service Menu*, complete the following steps:


1. Press the  **Enter** key to enter the *Main Menu*.
2. Press the  key three times and then press the  **Enter** key to select the *Service* menu.
3. Use the  and  keys to increment or decrement the displayed value (default = 5000) to enter the *service passcode*, and then press the  **Enter** key to access the *Service* menu.



Note: *When entering the passcode, press and release an arrow key to change the value one digit at a time, or press and hold an arrow key to change the value at an accelerating rate.*

4. Proceed to the appropriate section for the desired menu option.



5.2.1 Diagnostics

To enter the *Diagnostics* menu option from the *Service Menu*, complete the following steps:

1. Use the ▲ and ▼ keys as necessary to highlight the *Diagnostics* menu option.
2. Press the  **Enter** key to enter the *Diagnostics* menu.
3. *Page 1* of the *Diagnostics* option displays the current values for the following parameters:
 - O2 μ A
 - Output mA
 - Output %

When you have finished reading the information, press the  **Enter** key to move to *Page 2* of the *Diagnostics* menu or press the  **Cancel** key to exit the *Diagnostics* menu.

4. *Page 2* of the *Diagnostics* option displays the current values for the following parameters:
 - Temp °C
 - Temp Res
 - Gain
 - OX-n (currently installed sensor type, n = 1, 2, 3 or 4)

When you have finished reading the information, press the  **Enter** key to move to *Page 1* of the *Diagnostics* menu or press the  **Cancel** key to exit the *Diagnostics* menu.

5. Press the  **Cancel** key twice to return to measurement mode.

Chapter 6. Specifications

6.1 Intrinsically Safe (IS) Installation

Intrinsically safe installations require an MTL7706 zener barrier or galvanic isolator and an IS cable.

6.1.1 Power Requirements

24 to 28 VDC at 50 mA

6.1.2 Cable

p/n 704-1318-02 (2 m length) or p/n 704-1318-10 (10 m length), blue jacketed, twisted pair, 26 AWG conductors, connector

6.1.3 Output

Total load must equal $250\ \Omega \pm 5\%$ when using zener barrier

6.2 Non-Incendive (Div 2) and General Purpose Installation

No zener barrier or galvanic isolator is used (certification pending)

6.2.1 Cable

p/n 704-1317-02 (2 m length) or p/n 704-1317-10 (10 m length), blue jacketed, twisted pair, 26 AWG conductors, connector

6.2.2 Power Requirements

9 to 28 VDC loop-powered, 0.7 W max

6.3 All Installations

6.3.1 Process Wetted Materials

SS process unit: 316 stainless steel, Viton[®] O-ring, gold-plated sensor electrical contacts, and glass

6.3.2 User-Selectable Measurement Ranges

- *PPM sensors:*
 - 0 to 10 ppm_v O₂ (OX-1 or OX-2 only)
 - 0 to 20 ppm_v O₂ (OX-1 or OX-2 only)
 - 0 to 50 ppm_v O₂ (OX-1 or OX-2 only)
 - 0 to 100 ppm_v O₂
 - 0 to 200 ppm_v O₂
 - 0 to 500 ppm_v O₂
 - 0 to 1000 ppm_v O₂
 - 0 to 2000 ppm_v O₂
 - 0 to 5000 ppm_v O₂
 - 0 to 10,000 ppm_v O₂
- *Percent sensors:*
 - 0% to 1% O₂
 - 0% to 2% O₂
 - 0% to 5% O₂
 - 0% to 10% O₂
 - 0% to 25% O₂
 - 0% to 50% O₂

6.3.3 Accuracy

- ±1% of range at calibration point
- ±2% of range at the calibration point
for the 0 to 10 ppm_v O₂ range (OX-1, 2)

6.3.4 Repeatability

- $\pm 1\%$ of range
- $\pm 2\%$ of range for the 0 to 10 ppm_v O₂ range (OX-1, 2)

6.3.5 Resolution

$\pm 0.1\%$ of range

6.3.6 Linearity

$\pm 2\%$ of range (OX-1, 2, 3, 5)

$\pm 5\%$ of range (OX-4)

6.3.7 O₂ Sensor Operating Temperature

32°F to 113°F (0°C to 45°C)

6.3.8 Sample Pressure

Vented to atmosphere during operation and calibration

6.3.9 Atmospheric Pressure Effect

$\pm 0.13\%$ of reading per mmHg (directly proportional to absolute pressure). During calibration, pressure and flow must be kept constant.

6.3.10 Process Connection

1/8" NPT-F inlet and outlet

6.3.11 Dimensions

4.10 in. x 2.75 in. x 2.05 in.

6.3.12 Weight

1.35 lb (612 grams)

6.3.13 Sample Flow Rate

1.0 SCFH (500 cc/min) recommended

6.3.14 Electrical Classification

Intrinsically Safe package with zener barrier or galvanic isolator:

USA/Canada

IS for Class I, Div. 1, Groups A, B, C, D, T4

IS for Class I, Zone 0, AEx ia IIC T4; T6; Tamb -20 to +60°C

EU ATEX

II 1 G ia IIC Ga

IECEX Ex ia IIC T4; Tamb -20 to +60°C

Standard package; non-incendive without use of zener barrier or galvanic isolator (certification pending):

USA/Canada

Class I, Div. 2, Groups A, B, C, D, T6

ATEX/IECEX

Ex na IIC T6

Weatherproof/Corrosion Resistant (certification pending):

Type 4X

IP66

6.3.15 European Compliance

Complies with EMC Directive 2004/108/EC

6.3.16 Product Label

A typical product label is shown in *Figure 8* below:



Figure 8: oxy.IQ Label - IS Package Option

[no content intended for this page]

Appendix A. Outline and Installation Drawings

This appendix includes the following **oxy.IQ** drawings:

- “Outline & Installation (ref. dwg. 712-1840, SH 1 of 1)” on page 38
- “Cable, Standard (ref. dwg. 704-1317, SH 1 of 2)” on page 39
- “Cable, Standard (ref. dwg. 704-1317, SH 2 of 2)” on page 40
- “Cable, IS (ref. dwg. 704-1318, SH 1 of 2)” on page 41
- “Cable, IS (ref. dwg. 704-1318, SH 2 of 2)” on page 42
- “Wiring Diagram (ref. dwgs. 702-285 & 702-286)” on page 43

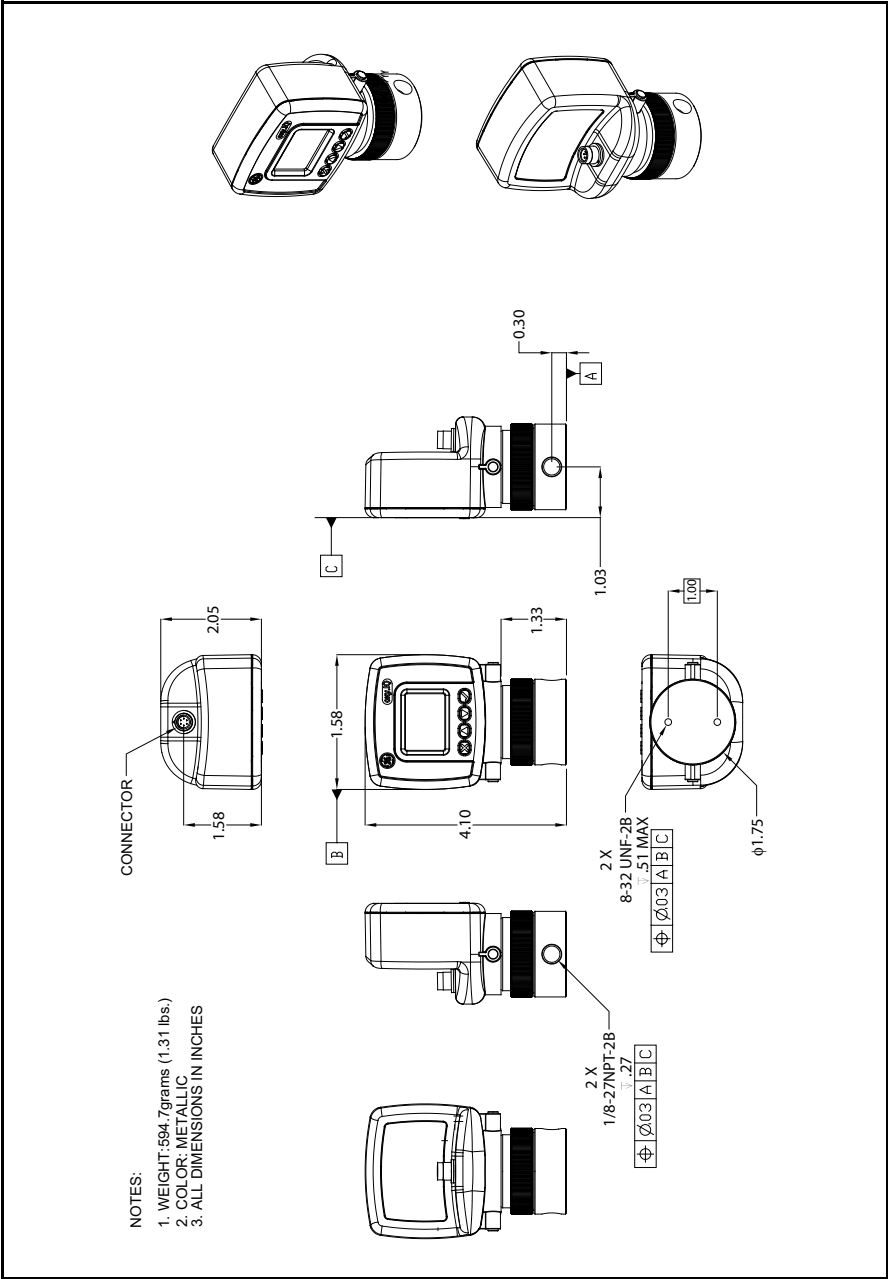
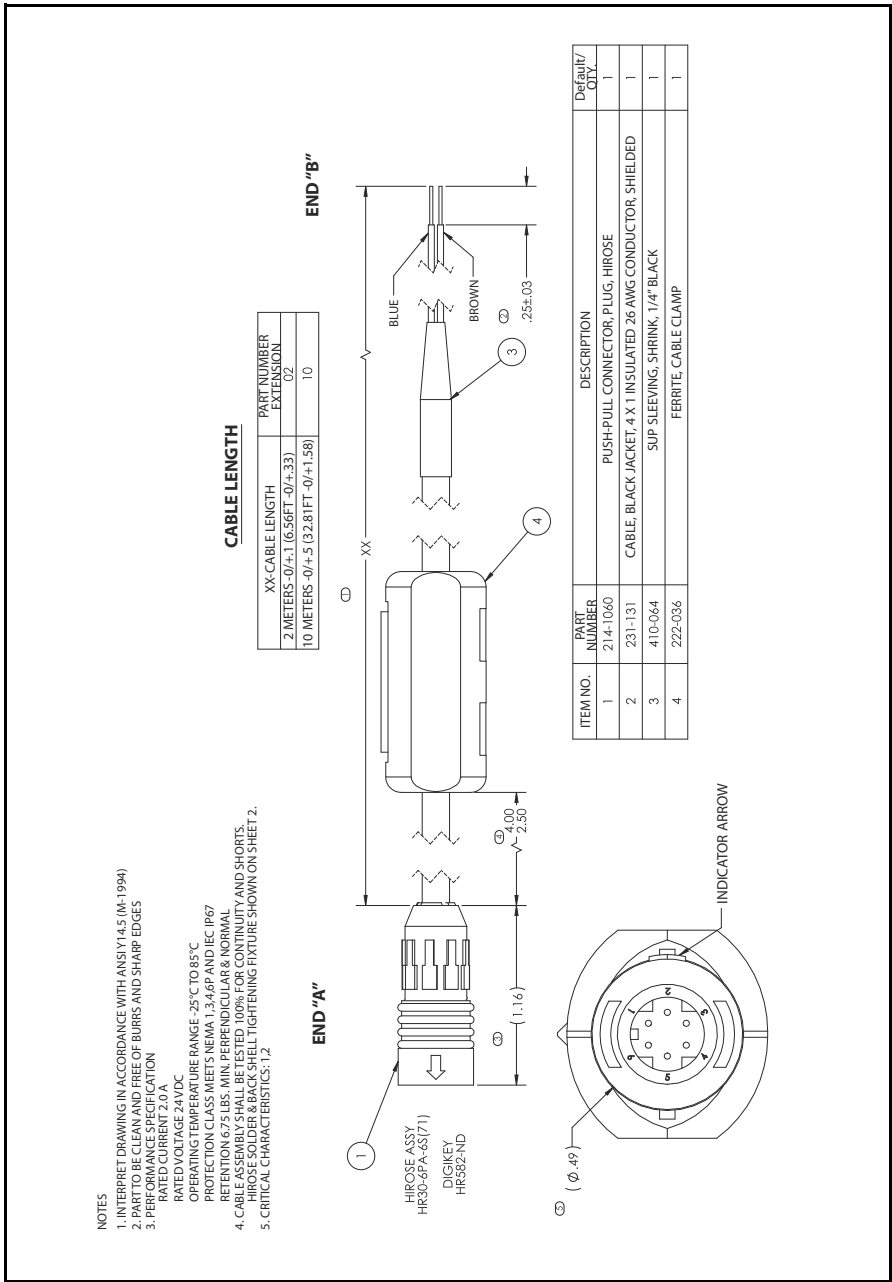


Figure 9: Outline & Installation (ref. dwg. 712-1840, SH 1 of 1)



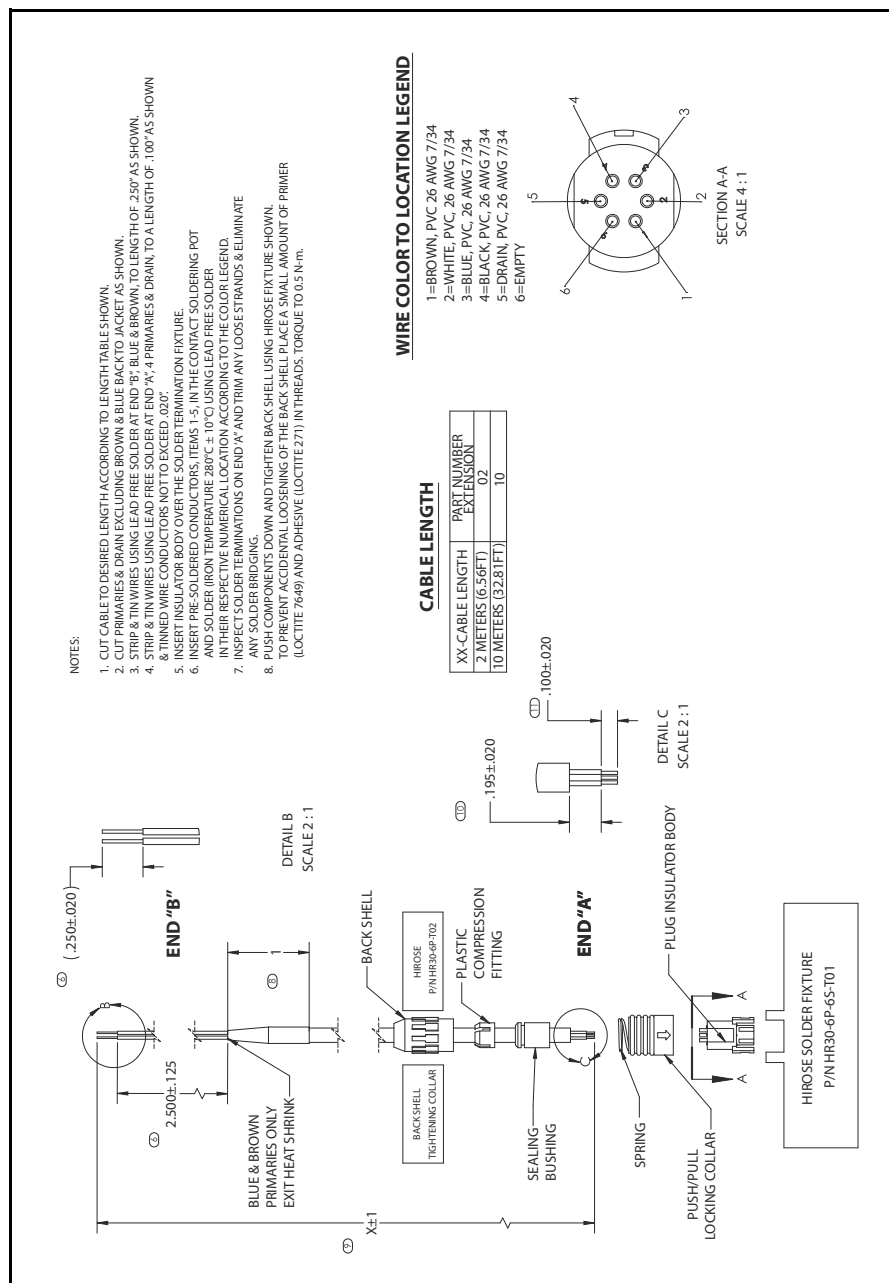


Figure 11: Cable, Standard (ref. dwg. 704-1317, SH 2 of 2)

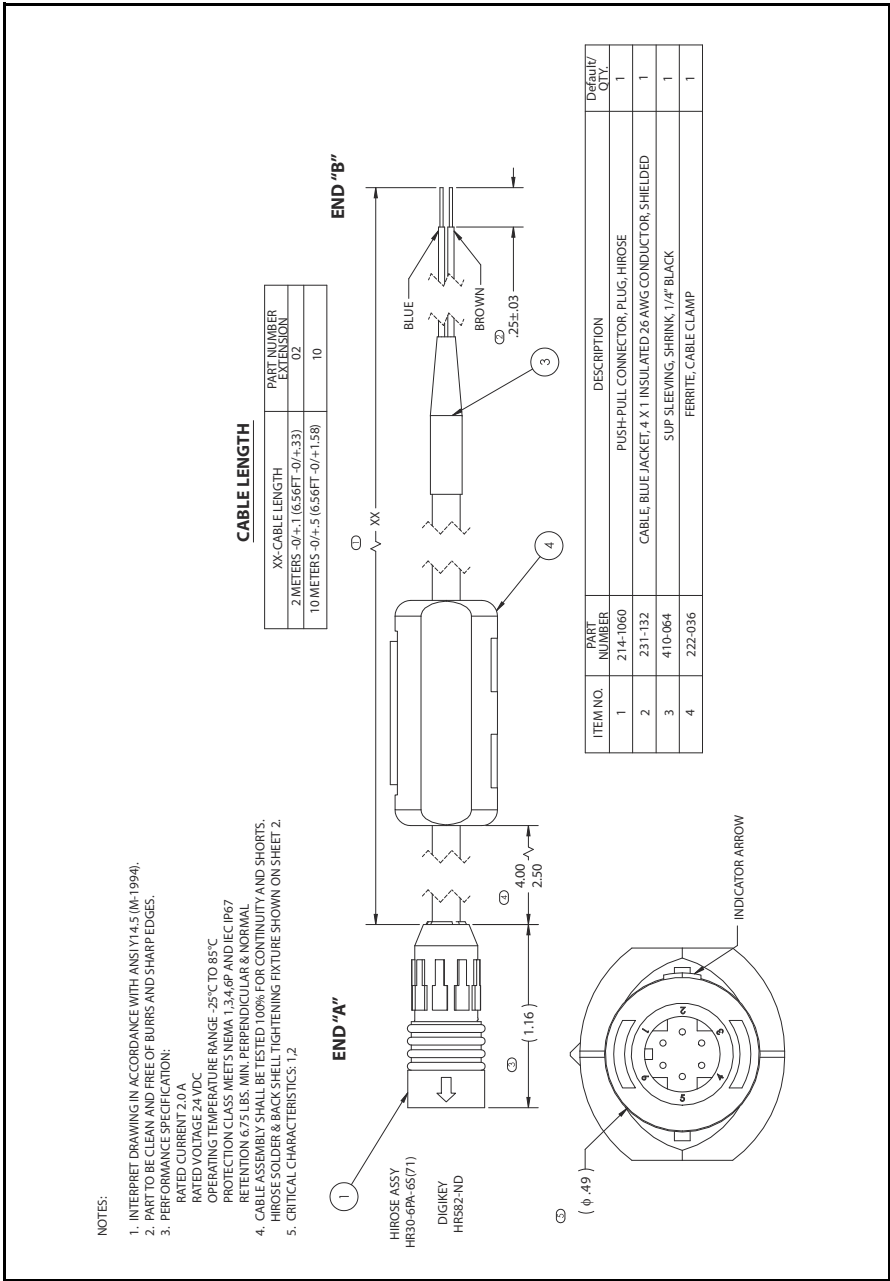


Figure 12: Cable, IS (ref. dwg. 704-1318, SH 1 of 2)

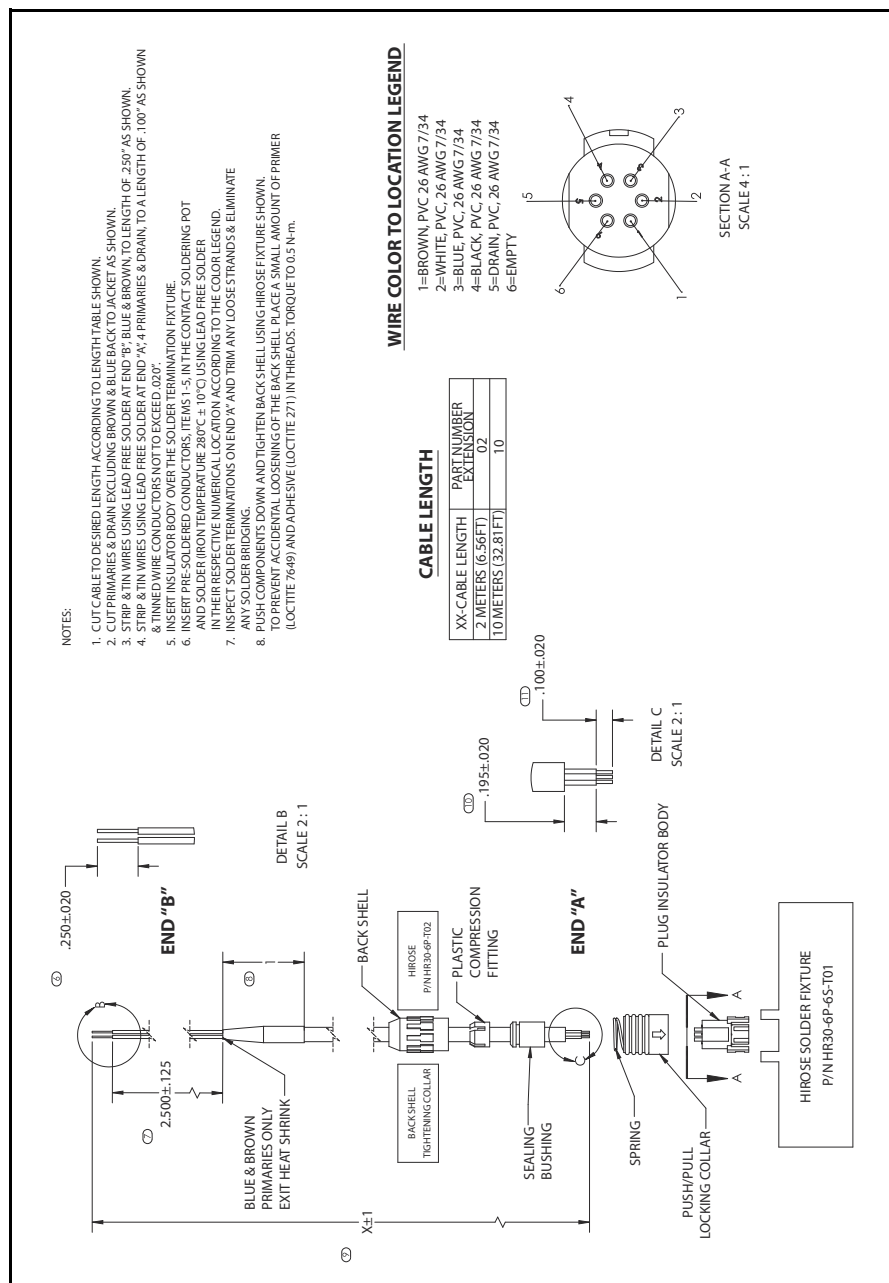


Figure 13: Cable, IS (ref. dwg. 704-1318, SH 2 of 2)

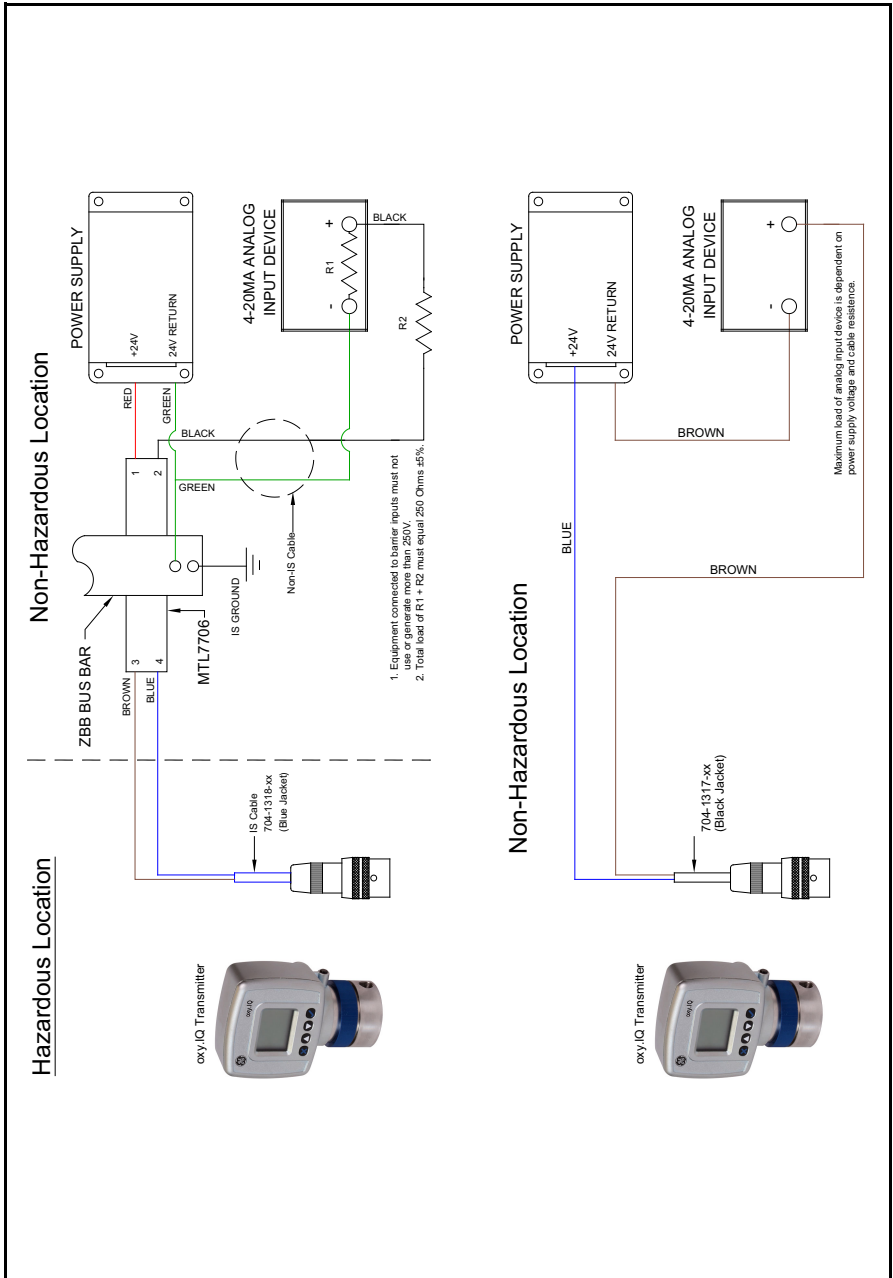


Figure 14: Wiring Diagram (ref. dwgs. 702-285 & 702-286)

[no content intended for this page]

Appendix B. Menu Maps

This appendix includes the following **oxy.IQ** menu maps:

- User's Menu Map for **oxy.IQ**
- Service Personnel Menu Map for **oxy.IQ**

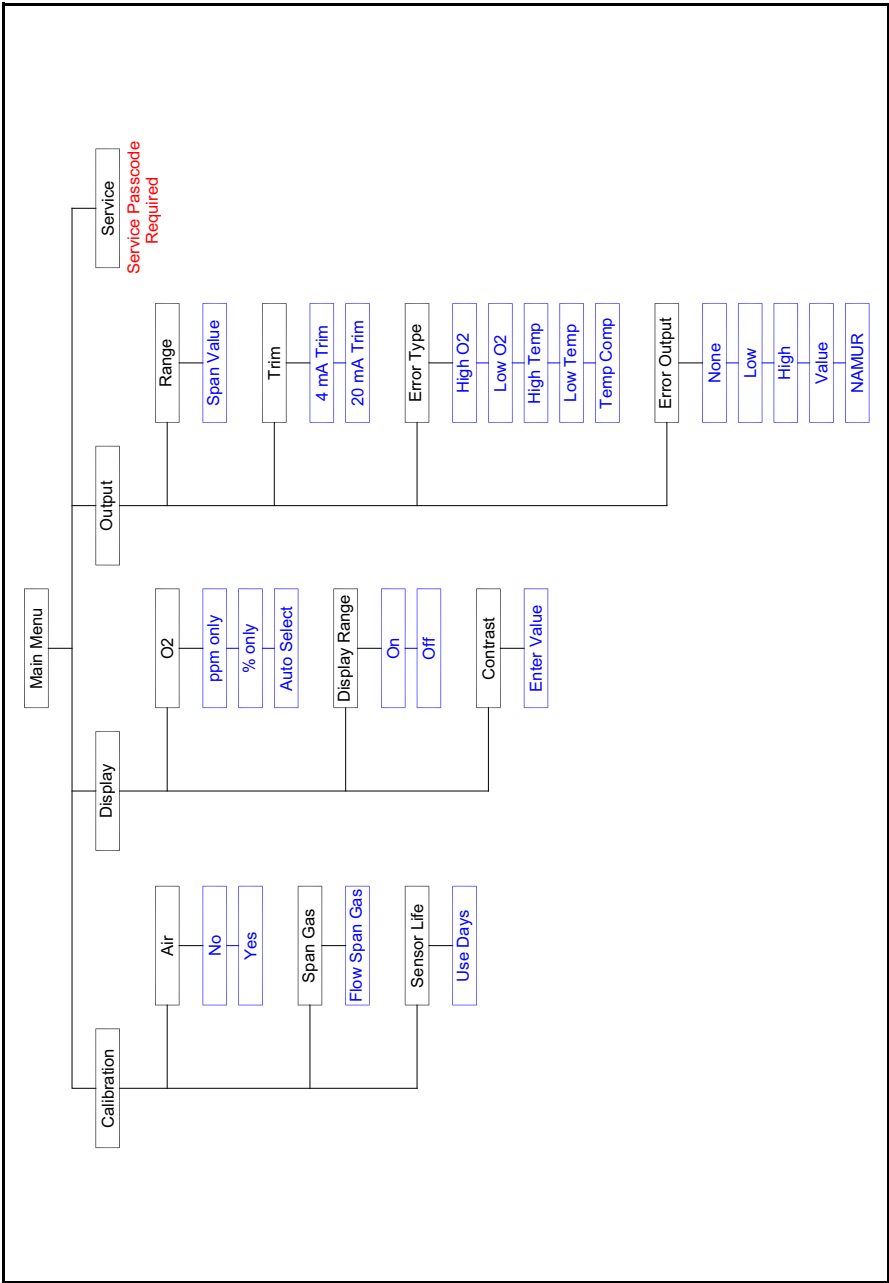


Figure 15: User's Menu Map

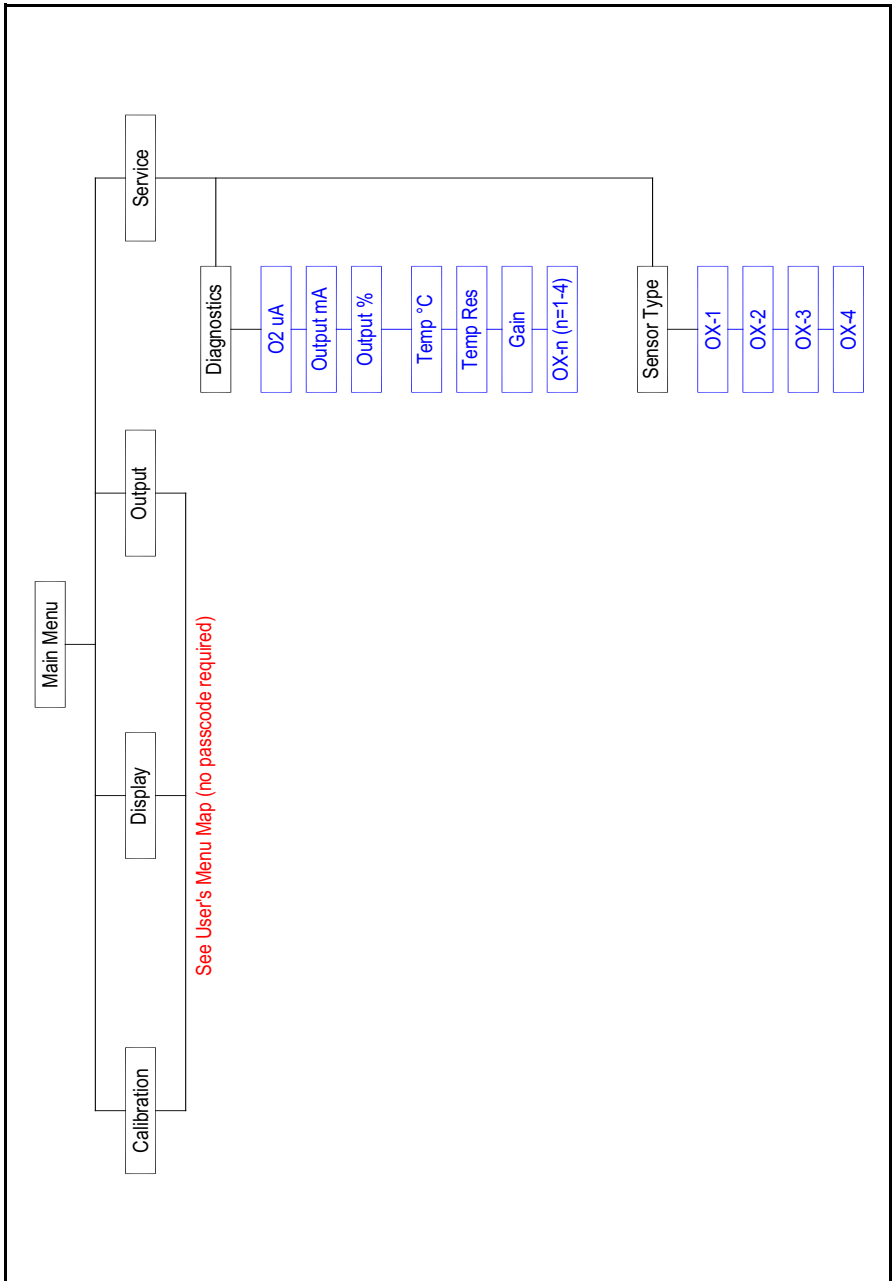


Figure 16: Service Personnel Menu Map

[no content intended for this page]

Appendix C. Order String

OXY.IQ-BCD-EZ

<i>Option Code</i>	<i>Description</i>
A - OXY.IQ	oxy.IQ Oxygen Transmitter; 4 to 20 mA output
B - Sensor	
0	no sensor
1	standard ppm sensor, 0 to 10, 20, 50, 100, 200, 500 and 1000 ppm
2	acid ppm sensor, 0 to 10, 20, 50, 100, 200, 500 and 1000 ppm
3	standard percent sensor
4	acid percent sensor
5	standard ppm sensor, 0 to 100, 200, 500 and 1000 ppm
C - Package	
1	standard package
3	Intrinsically safe, US/CAN Class 1, Div 1, Groups ABCD, T4; ATEX/IECEX Ex ia IIC Ga T4
4	EX package, IP66, 6mm fitting, ATEX, IECEx only
D - Cable Length	
0	no cable
1	2 meter
2	10 meter
E - Zener Barrier	
0	none
1	Zener Barrier
2	Galvanic Isolator
Z - Special	
0	none
S	special

Note: Sensor ranges are recommended ranges.

OX-1 can also be used for 0 to 10,000 ppm

OX-2 can also be used for 0 to 10,000 ppm

OX-5 can also be used for 0 to 10,000 ppm

[no content intended for this page]

Appendix D. Certifications

The following oxy.IQ certifications are included in this appendix:

- “ATEX EC-Type Examination Certificate” on page 52
- “ATEX IECEx MAM Ex Certificate” on page 56
- “Canadian Certificate of Compliance” on page 58
- “FM Certificate of Compliance” on page 60
- “IECEx Certificate of Conformity” on page 62

D.1 ATEX EC-Type Examination Certificate

1 **EC-TYPE EXAMINATION CERTIFICATE**

- 2 **Equipment or Protective systems intended for use in Potentially Explosive Atmospheres - Directive 94/9/EC**
- 3 **EC-Type Examination Certificate No:** FM14ATEX0032X
- 4 **Equipment or protective system:** Oxygen Transmitter, Model oxy.IQ
(Type Reference and Name)
- 5 **Name of Applicant:** GE Infrastructure Sensing
- 6 **Address of Applicant:** 1100 Technology Park Drive
Billerica, MA 01821
USA
- 7 This equipment or protective system and any acceptable variation thereto is specified in the schedule to this certificate and documents therein referred to.
- 8 FM Approvals Ltd, notified body number 1725 in accordance with Article 9 of Directive 94/9/EC of 23 March 1994, certifies that this equipment has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of equipment intended for use in potentially explosive atmospheres given in Annex II to the Directive.

The examination and test results are recorded in confidential report number:

3047174 dated 23rd February 2015
- 9 Compliance with the Essential Health and Safety Requirements, with the exception of those identified in item 15 of the schedule to this certificate, has been assessed by compliance with the following documents:

EN 60079-0:2012 and EN 60079-11:2012
- 10 If the sign 'X' is placed after the certificate number, it indicates that the equipment is subject to specific conditions of use specified in the schedule to this certificate.
- 11 This EC-Type Examination certificate relates only to the design, examination and tests of the specified equipment or protective system in accordance to the directive 94/9/EC. Further requirements of the Directive apply to the manufacturing process and supply of this equipment or protective system. These are not covered by this certificate.
- 12 The marking of the equipment or protective system shall include:



II 1 G Ex ia IIC T4 Ga; Tamb = -20°C to +60°C



Digitally signed by Mick Gower
DN: cn=Mick Gower, o=FM Approvals, cn,
email=mick.gower@fmapprovals.com,
c=GB
Date: 2015.02.24 11:54:22 Z

Mick Gower
Certification Manager, FM Approvals Ltd.

Issue date: 24th February 2015

THIS CERTIFICATE MAY ONLY BE REPRODUCED IN ITS ENTIRETY AND WITHOUT CHANGE

FM Approvals Ltd, 1 Windsor Dials, Windsor, Berkshire, UK, SL4 1RS
T: +44 (0) 1753 750 000 F: +44 (0) 1753 868 700 E-mail: alex@fmapprovals.com www.fmapprovals.com

F ATEX 020 (Apr/14)

Page 1 of 3

D.1 ATEX EC-Type Examination Certificate (cont.)

SCHEDULE



to EC-Type Examination Certificate No. FM14ATEX0032X

13 Description of Equipment or Protective System:

The Model oxy.IQ is a two-wire, loop-powered transmitter for measuring oxygen in ten ppm ranges and seven percentage ranges. The Model oxy.IQ Transmitter contains one of five different oxygen cells. The cells are specified to be part numbers OX-1, OX-2, OX-3 and OX-4 and OX-5. The type of oxygen cell determines the range of measurement. The measured oxygen is converted to a mA signal for delivery to the control equipment located in the non-hazardous area.

The Model oxy.IQ Transmitter's electronics are contained on one printed circuit board. The circuit board is located inside of a metallic housing. An oxygen cell holder is connected to the circuit board by way of pins. The base of the oxygen cell holder contains a threaded joint for replacement of the oxygen cell. The housing contains a polymeric window display. The polymeric window is approximately 1" by 3/4". The housing, including the sensor assembly, is approximately 4.1" in height, by 2.75" in width, and 2.05" in depth.

oxy.IQ-a3b-c0. Oxygen Transmitter

a = Sensor: 0, 1, 2, 3, 4 or 5.

b = Cable Length: 0, 1 or 2.

c = Barrier: 0, 1 or 2.

Operation Temperature Ranges:

The ambient operating temperature range of the Model oxy.IQ Transmitter is -20°C to +60°C. The Transmitter is specified for use in normal atmospheric conditions.

Intrinsically Safe Energy Limitation Parameters:

Ui = 28V, Ii = 150mA, Pi = 1.05W, Ci = 0, Li = 0.

14 Specific Conditions of Use:

The Model oxy.IQ Oxygen Transmitter will not pass the 500Vrms dielectric strength test. This must be taken into account during installation.

15 Essential Health and Safety Requirements:

The relevant EHSRs that have not been addressed by the standards listed in this certificate have been identified and assessed in the confidential report identified in item 8.

16 Test and Assessment Procedure and Conditions:

This EC-Type Examination Certificate is the result of testing of a sample of the product submitted, in accordance with the provisions of the relevant specific standard(s), and assessment of supporting documentation. It does not imply an assessment of the whole production.

Whilst this certificate may be used in support of a manufacturer's claim for CE Marking, FM Approvals Ltd accepts no responsibility for the compliance of the equipment against all applicable Directives in all applications.

This Certificate has been issued in accordance with FM Approvals Ltd's ATEX Certification Scheme.

THIS CERTIFICATE MAY ONLY BE REPRODUCED IN ITS ENTIRETY AND WITHOUT CHANGE

FM Approvals Ltd, 1 Windsor Dials, Windsor, Berkshire, UK, SL4 1RS

T: +44 (0) 1753 750 000 F: +44 (0) 1753 868 700 E-mail: atex@fmaprovals.com www.fmaprovals.com

F ATEX 020 (Apr/14)

Page 2 of 3

D.1 ATEX EC-Type Examination Certificate (cont.)

oxy.IQ User's Manual

D.1 ATEX EC-Type Examination Certificate (cont.)

Blueprint Report

GE Infrastructure Sensing (1000000179)

Class No 3610

Original Project I.D. 3047174

Certificate I.D. FM14ATEX0032X

<u>Drawing No.</u>	<u>Revision Level</u>	<u>Drawing Title</u>	<u>Last Report</u>	<u>Electronic Drawing</u>
714-1344	A	Oxy.IQ Safety Manual	3047174	Yes (pdf)
752-341	A	MAIN PCB	3047174	Yes (pdf)
752-347	A	Schematic Diagram - System Diagram oxy.IQ -FM Controlled Document	3047174	Yes (pdf)

D.2 ATEX IECEX MAM Ex Certificate

Officine Meccaniche M.A.M.

ATEX NOTIFIED



IECEX NOTIFIED



0080

Apparecchiature antideflagranti

Via Vico Veneto 32

20090 Fizzonasco di P.Ve Emanuele Milano

Tel. ++39290400419

Fax ++39290400423

e-mail info@mamitaly.itwww.mamitaly.it**DICHIARAZIONE CE DI CONFORMITA'**
CE DECLARATION OF CONFORMITY

Cliente: GE Sensing EMEA	Ordine No.: 538156 Order. no.
Commessa MAM: 1789 MAM Job	Materiale: GUB2W Material
Serial No.: 4586, 4587	

Con il presente certificato dichiariamo che il materiale fornito a fronte dell'ordine sopra citato è conforme alle seguenti direttive comunitarie e con la relativa legislazione nazionale di recepimento.:

We declare that the product supplied as per above mentioned order is in conformity with following comunitary directives and with the relevant national laws

- **ATEX DIRECTIVE 94/9/EC of March 23, 1994**

Dichiara inoltre che sono state applicate le seguenti norme armonizzate:

We also declare that following armonized standard have been applied

- **EN 60079-0 :2009 (IEC 60079-0 :2011)**
- **EN 60079-1 :2007 (IEC 60079-1 :2007)**
- **EN 60079-31:2009 (IEC 60079-31:2008)**
- **EN 60079-11:2007 (IEC 60079-11:2011)**


L'apparecchiatura è coperta dal seguente IECEX Certificate of Conformity

Apparatus are certified by following IECEX Certificate of Conformity

ISSeP 10ATEX011**IECEX INE 11.0018X****Ex d IIC T6 or T5 or T4 Gb****Ex tb IIIC T85°C or 100°C or 135°C Db IP66****Ex d [ia Ga] IIC T6 Gb****Ex tb [ia Da] IIIC T85°C Db IP66****Temp. Amb. -50°C/+60°C**Fizzonasco, July 18th 2014**OFFICINE MECCANICHE M.A.M.**

F.Forciniti ATEX Authorized Person

D.2 ATEX IECEx MAM Ex Certificate (cont.)

 MAM ANTIDEFLAGRANTI Via Vico Veneto, 32 20090 Fizzonasco – Milano Tel. 39290400419 Fax 39290400423 www.mamitaly.it info@mamitaly.it		N.° comm : 1789 MAM Job		Data: 17 July 2014 Date:		
SERVIZIO CONTROLLO QUALITA' QUALITY CONTROL SERVICE						
Cliente: GE Sensing EMEA Customer:						
Ordine cliente: 538156 Purchase Order:				Data: 07 July 2014 Date:		
VERBALE VERIFICHE E PROVE INDIVIDUALI ROUTINE CHECKS AND TESTS REPORT						
In conformità a : According to:	Tipo di custodia Type of enclosure	Q.tà Q.ty	Tipo di verifica Type of check or test	Esito Pos.	Result Neg.	Note Notes
IEC/EN 60079-0 IEC/EN 60079-1 IEC/EN 60079-31 IEC/EN 60079-11	GUB2W	2	Verifica dimensionale Dimensional check Prova di sovrappressione a 2000 KPa x 10 s Overpressure check at Prova di funzionamento elettrico Electrical operation check Prova di funzionamento meccanico Mechanical operation check Verifica dispositivi di sicurezza Safety devices check Serial Number.....4586....4587.. Lotto no.....06/14..... Batch no.	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
Certificato di riferimento: IECEx-INE-11.0018X – ISSeP 10ATEX011 ref. Certificate Classificazione: Ex d IIC T6 <input checked="" type="checkbox"/> or T5 <input type="checkbox"/> or T4 <input type="checkbox"/> Gb Classification Ex tb IIIC T85°C <input checked="" type="checkbox"/> or 100°C <input type="checkbox"/> or 135°C <input type="checkbox"/> Db IP65 <input checked="" type="checkbox"/> or IP66 <input type="checkbox"/> Ex d [ia Ga] IIC T6 Gb Ex tb [ia Da] IIIC T80°C Db IP65 <input type="checkbox"/> or IP66 <input type="checkbox"/> Temp. amb. -50°C/+60°C Apparecchiatura Installata: GE OXY.IQ Apparatus Installed Caratteristiche Elettriche Vmax: 24V Wmax: 15						
Incaricato cliente Customer's inspector			Incaricato MAM MAM inspector			

D.3 Canadian Certificate of Compliance



FM Approvals
1151 Boston Providence Turnpike
P.O. Box 9102 Norwood, MA 02062 USA
T: 781 762 4300 F: 781-762-9375 www.fmapprovals.com

CERTIFICATE OF COMPLIANCE

HAZARDOUS LOCATION ELECTRICAL EQUIPMENT PER CANADIAN REQUIREMENTS

This certificate is issued for the following equipment:

oxy.IQ-a3b-c0. Oxygen Transmitter .

IS/II/1/ABCD/T4 Ta = -20°C to +60°C – 752-347; Entity;

Ex ia IIC T4 Ta = -20°C to +60°C – 752-347; Entity;

Entity Parameters:

Ui (Vmax) = 28V, Ii (Imax) = 150mA, Pi (Pmax) = 1.05W, Ci = 0μF, Li = 0mH.

a = Sensor: 0, 1, 2, 3, 4 or 5.

b = Cable Length: 0, 1 or 2.

c = Barrier: 0, 1 or 2.

Special Conditions of Use:

The Model oxy.IQ Oxygen Transmitter will not pass the 500Vrms dielectric strength test. This must be taken into account during installation.

Equipment Ratings:

Intrinsically Safe (Entity) for use in Class I, Division 1, Groups A, B, C and D; Temperature Class T4
Tamb = -20°C to +60°C in accordance with Control Drawing No. 752-347; Ex ia IIC T4 Tamb = -20°C to +60°C; in accordance with Control Drawing No. 752-347; Hazardous Locations.

FM Approved for:

GE Infrastructure Sensing
Billerica, MA 01821

To verify the availability of the Approved product, please refer to www.approvalguide.com
FM Approvals HLC 5/13

3047174C
Page 1 of 2

D.3 Canadian Certificate of Compliance (cont.)



This certifies that the equipment described has been found to comply with the following Approval Standards and other documents:

CAN/CSA-E60079-0	2011
CAN/CSA -E60079-11	2014
C22.2 No. 1010.1	2004

Original Project ID: 3047174C Approval Granted: February 23, 2015

Subsequent Revision Reports / Date Approval Amended

Report Number	Date	Report Number	Date
---------------	------	---------------	------

FM Approvals LLC


J.E. Marquedant
Manager, Electrical Systems

23 February 2015
Date

To verify the availability of the Approved product, please refer to www.approvalguide.com
FM Approvals HLC 5/13 3047174C
Page 2 of 2

D.4 FM Certificate of Compliance



FM Approvals
1151 Boston Providence Turnpike
P.O. Box 9102 Norwood, MA 02062 USA
T: 781 762 4300 F: 781-762-9375 www.fmapprovals.com

CERTIFICATE OF COMPLIANCE

HAZARDOUS (CLASSIFIED) LOCATION ELECTRICAL EQUIPMENT

This certificate is issued for the following equipment:

Oxy.IQ-a3b-c0. Oxygen Transmitter.

IS/II/1/ABCD/T4 Ta = -20°C to +60°C – 752-347; Entity;

I/O/AEx ia IIC T4 Ta = -20°C to +60°C – 752-347; Entity;

Entity Parameters:

Ui = 28V, Ii = 150mA, Pi = 1.05W, Ci = 0μF, Li = 0mH.

a = Sensor: 0, 1, 2, 3, 4 or 5.

b = Cable Length: 0, 1 or 2.

c = Barrier: 0, 1 or 2.

Special Conditions of Use:

The Model oxy.IQ Oxygen Transmitter will not pass the 500Vrms dielectric strength test. This must be taken into account during installation.

Equipment Ratings:

Intrinsically Safe (Entity) for use in Class I, Division 1, Groups A, B, C and D; Temperature Class T4 Tamb = -20°C to +60°C in accordance with Control Drawing No.752-347; Intrinsically safe (Entity) for use in Class I, Zone 0, AEx ia IIC T4 Tamb = -20°C to +60°C; in accordance with Control Drawing No. 752-347; Hazardous (Classified) Locations.

FM Approved for:

GE Infrastructure Sensing
Billerica, MA 01821

To verify the availability of the Approved product, please refer to www.approvalguide.com
FM Approvals HLC 5/13 3047174

Page 1 of 2

D.4 FM Certificate of Compliance (cont.)



This certifies that the equipment described has been found to comply with the following Approval Standards and other documents:

FM Class 3600	2011
FM Class 3610	2010
FM Class 3810	2005
ANSI/ISA 61010-1	2004
ANSI/ISA 60079-0	2013
ANSI/ISA 60079-11	2013

Original Project ID: 3047174

Approval Granted: February 23, 2015

Subsequent Revision Reports / Date Approval Amended

Report Number	Date	Report Number	Date
---------------	------	---------------	------

FM Approvals LLC



A handwritten signature in black ink, appearing to read "J.E. Marquedant".

J.E. Marquedant
Manager, Electrical Systems

23 February 2015
Date

To verify the availability of the Approved product, please refer to www.approvalguide.com
FM Approvals HLC 5/13 3047174
Page 2 of 2

D.5 IECEx Certificate of Conformity



IECEx Certificate of Conformity


INTERNATIONAL ELECTROTECHNICAL COMMISSION
IEC Certification Scheme for Explosive Atmospheres
for rules and details of the IECEx Scheme visit www.iecex.com

Certificate No.:	IECEx FMG 14.0016X	Issue No: 0	Certificate history: Issue No. 0 (2015-02-13)
Status:	Current	Page 1 of 3	
Date of Issue:	2015-02-13		
Applicant:	GE Infrastructure Sensing 1100 Technology Park Drive Billerica, MA 01821 United States of America		
Electrical Apparatus:	Model oxy.IQ Oxygen Transmitter		
Optional accessory:			
Type of Protection:	Intrinsic Safety		
Marking:	Ex ia IIC T4 Ga; -20°C ≤ Ta ≤ +60°C Energy Limitation Parameters: Ui ≤ 28V, Ii ≤ 150mA, Pi ≤ 1,05W, Ci = 0, Li = 0.		
Approved for issue on behalf of the IECEx Certification Body:	James Marquedant		
Position:	Manager, Electrical Systems		
Signature: (for printed version)			
Date:			

1. This certificate and schedule may only be reproduced in full.
2. This certificate is not transferable and remains the property of the issuing body.
3. The Status and authenticity of this certificate may be verified by visiting the [Official IECEx Website](#).

Certificate issued by:

FM Approvals LLC
1151 Boston-Providence Turnpike
Norwood, MA 02062
United States of America



Member of the FM Global Group

D.5 IECEx Certificate of Conformity (cont.)



IECEx Certificate of Conformity

Certificate No: IECEx FMG 14.0016X Issue No: 0

Date of Issue: 2015-02-13 Page 2 of 3

Manufacturer: **GE Infrastructure Sensing**
1100 Technology Park Drive
Billerica, MA 01821
United States of America

Additional Manufacturing
location(s):

This certificate is issued as verification that a sample(s), representative of production, was assessed and tested and found to comply with the IEC Standard list below and that the manufacturer's quality system, relating to the Ex products covered by this certificate, was assessed and found to comply with the IECEx Quality system requirements. This certificate is granted subject to the conditions as set out in IECEx Scheme Rules, IECEx 02 and Operational Documents as amended.

STANDARDS:

The electrical apparatus and any acceptable variations to it specified in the schedule of this certificate and the identified documents, was found to comply with the following standards:

IEC 60079-0 : 2011 Explosive atmospheres - Part 0: General requirements
Edition:6.0

IEC 60079-11 : 2011 Explosive atmospheres - Part 11: Equipment protection by intrinsic safety "i"
Edition:6.0

*This Certificate **does not** indicate compliance with electrical safety and performance requirements other than those expressly included in the Standards listed above.*

TEST & ASSESSMENT REPORTS:

A sample(s) of the equipment listed has successfully met the examination and test requirements as recorded in



Test Report:

[US/FMG/ExTR14.0016/00](#)

Quality Assessment Report:

[GB/BAS/QAR06.0025/05](#)

D.5 IECEx Certificate of Conformity (cont.)



IECEx Certificate
of Conformity

Certificate No:IECEx FMG 14,0016XIssue No: 0

Date of Issue:2015-02-13Page 3 of 3

Schedule

EQUIPMENT:

Equipment and systems covered by this certificate are as follows:

The Model oxy.IQ is a two-wire, loop-powered transmitter for measuring oxygen in ten ppm ranges and seven percentage ranges. The Model oxy.IQ Transmitter contains one of five different oxygen cells. The cells are specified to be the OX-1, OX-2, OX-3, OX-4 and the OX-5. The type of oxygen cell determines the range of measurement. The measured oxygen is converted to a mA signal for delivery to the control equipment located in the non-hazardous area.

The Model oxy.IQ Transmitter's electronics are contained inside of a metallic housing having a polymeric display window. The base of the hosing has an oxygen cell holder which has a threaded joint for replacement of the oxygen cell. The polymeric window display which is approximately 1" by ¾".The housing, including the sensor, is approximately 4.1" in height, by 2.75" in width, and 2.05" in depth.

Operation Temperature Ranges: The ambient operating temperature range of the Model oxy.IQ Transmitter is -20°C to +60°C. The Transmitter is specified for use in normal atmospheric conditions.

The energy limitation parameters for type of protection intrinsic safety are: Ui <= 28V, Ii <= 150mA, Pi <= 1.05W, Ci = 0, Li = 0.

CONDITIONS OF CERTIFICATION: YES as shown below:

The Model oxy.IQ Oxygen Transmitter will not pass the 500Vrms dielectric strength test. This must be taken into account during installation.

64

oxy.IQ User's Manual

A	
Adjusting, oxy.IQ	14
Air Calibration	17
Analog Output see Output	
Applications	2
B	
Buttons, Keypad	13
C	
Cable	
Connector	8
Installed	8
Longer	9
Calculating Analog Output	19
Calibration	
Air	17
Existing Oxygen Sensor	18
Menu	21
New Oxygen Sensor	18
oxy.IQ	14
Span Gas	19
Certifications	51
Contrast, Adjusting Display	24
D	
Declaration of Conformity	77
Diagnostics Menu	30
Dimensions	33
Display	
Contrast, Adjusting	24
Location	13
Menu	21, 23
O2 Parameter, Selecting	23
Range, Setting	24
Document Number	i
Drawings, Outline & Installation	37
E	
Environmental Compliance	v

Error

- Output Value 27
- Type, Selecting 25

F

Features 3

I

Information Paragraphs iii

Initial Setup 13

Installation

- Cable 8
- Drawings 37
- Mounting the oxy.IQ 5
- Oxygen Sensor 10
- Sensor Manifold 6
- Wiring 8

Interference Gases 4

Intrinsically Safe 2

K

Keypad, Buttons 13

L

Label, Product 35

M

Main Menu

- Entering 14
- Map 46

Menu

- Calibration 21
- Display 21, 23
- Output 15, 21, 25
- Service 14
- Trim 16
- User 14, 21

Menu Maps 45

- Main Menu, Service 47
- Main Menu, User's 46

Mounting the Oxy.IQ 5

O

O2 Display Parameter, Selecting	23
Order String	49
O-Ring, Sensor Manifold	11
Outline & Installation Drawings	5, 37
Output	
Calculation	19
Error Condition	25
Error Value	27
High (20 mA), Trimming	17
Low (4 mA), Trimming	16
Menu	15, 25
Range, Selecting	15
Trimming	16
oxy.IQ	
Adjusting	14
Calibrating	14
Calibration, Air	17
Calibration, Span Gas	19
Installing	5
Output Range, Selecting	15
Oxygen Sensor	
Calibration, Existing	18
Calibration, New	18
Installation	10
Sensor Life	22
Unpacking	6

P

Passcode, Service Menu	29
Pressure Rating	7
Programming, User	21
Publication Date	i

R

Range	
Selecting	15
Setting Display	24
Return Policy	70

S

Safety

- Auxiliary Equipment iv
- General Issues iii
- Personal Equipment iv

Safety Manual 71

Sample System 4, 7

Sensor Manifold

- Mounting 6
- O-Ring 11

Service Menu

- Diagnostics Option 30
- Entering 29
- Menu Map 47
- Passcode 29

Span Gas Calibration 19

Specifications 31

T

Trimming

- Analog Output 16
- Output, High (20 mA) 17
- Output, Low (4 mA) 16

W

Warranty 69

WEEE Directive v

Weight 33

Wiring the oxy.IQ 8

Warranty

Each instrument manufactured by GE Sensing is warranted to be free from defects in material and workmanship. Liability under this warranty is limited to restoring the instrument to normal operation or replacing the instrument, at the sole discretion of GE Sensing. Fuses and batteries are specifically excluded from any liability. This warranty is effective from the date of delivery to the original purchaser. If GE Sensing determines that the equipment was defective, the warranty period is:

- One year from delivery for electronic or mechanical failures
- One year from delivery for sensor shelf life

If GE Sensing determines that the equipment was damaged by misuse, improper installation, the use of unauthorized replacement parts, or operating conditions outside the guidelines specified by GE Sensing, the repairs are not covered under this warranty.

The warranties set forth herein are exclusive and are in lieu of all other warranties whether statutory, express or implied (including warranties or merchantability and fitness for a particular purpose, and warranties arising from course of dealing or usage or trade).

Return Policy

If a GE Sensing instrument malfunctions within the warranty period, the following procedure must be completed:

1. Notify GE Sensing, giving full details of the problem, and provide the model number and serial number of the instrument. If the nature of the problem indicates the need for factory service, GE Sensing will issue a RETURN AUTHORIZATION NUMBER (RAN), and shipping instructions for the return of the instrument to a service center will be provided.
2. If GE Sensing instructs you to send your instrument to a service center, it must be shipped prepaid to the authorized repair station indicated in the shipping instructions.
3. Upon receipt, GE Sensing will evaluate the instrument to determine the cause of the malfunction.

Then, one of the following courses of action will then be taken:

- If the damage is covered under the terms of the warranty, the instrument will be repaired at no cost to the owner and returned.
- If GE Sensing determines that the damage is not covered under the terms of the warranty, or if the warranty has expired, an estimate for the cost of the repairs at standard rates will be provided. Upon receipt of the owner's approval to proceed, the instrument will be repaired and returned.

Addendum A. oxy.IQ Safety Manual

oxy.IQ	GE Sensing 1100 Technology Park Drive Billerica, MA 01821			Oxy.IQ Safety Manual
MODEL	DWG NO.	714-1344	REV. A	TITLE

Certification & Safety Statements for the oxy.IQ oxygen Transmitter

The oxy.IQ is a highly reliable and cost-effective two-wire, loop-powered transmitter with a linearized 4 to 20 mA output. It measures oxygen in ten ppm ranges and seven percentage ranges. All ranges are user-selectable. This compact transmitter uses proven sensor technology to accurately measure O₂ in a variety of gases, even in hazardous environments.

When installing this apparatus, the following requirements must be met:

- The system is covered by the certificate numbers FM14ATEX0032X and IECEx FMG 14.00016X as shown on the labels on the following page. The system temperature code is T4 in the temperature range of -20 to 60 degrees C.
- The apparatus should be de-energized before servicing.
- Installation shall be in accordance with the installation instructions and the National Electrical Code® ANSI/NFPA 70, the Canadian Electrical Code C22.1, or IEC/EN 60079-14, as applicable.
- Equipment is of type Intrinsically Safe and complies with: EN 60079-0:2012, EN 60079-11:2012, IEC 60079-0:2007, IEC 60079-11:2006, IEC 60529:1992, C22.2 No.1010.1:2004, CAN/CSA-E60079-0:2011, CAN/CSA-E60079-11:2011, C22.2.60529:2005, FM Class 3600:2011, FM Class 3610:2010, FM Class 3810:2005, ANSI/ISA 61010-1:2004 Ed.2, ANSI/ISA 60079-0:2009 Ed.5, ANSI/ISA 60079-11:2009 Ed.5
- The product contains no exposed parts which produce surface temperature infrared, electromagnetic ionizing, or non-electrical dangers.
- The product must not be subjected to mechanical or thermal stresses in excess of those permitted in the certification documentation and the instruction manual.
- The product cannot be repaired by the user; it must be replaced by an equivalent certified product. Repairs should only be carried out by the manufacturer or by an approved repairer. Please contact GE Customer Support Center for repair, maintenance or replacement of the product. For oxygen sensor replacements please contact GE Customer Support Center.

U.S.A
The Boston Center
1100 Technology Park Drive
Billerica, MA 01821
U.S.A
Tel: 800 833 9438 (toll-free)
978 437 1000
E-mail:sensing@ge.com

Ireland
Sensing House
Shannon Free Zone East
Shannon, County Clare
Ireland
Tel: +35 361 470200

oxy.IQ	GE Sensing 1100 Technology Park Drive Billerica, MA 01821			Oxy.IQ Safety Manual
MODEL	DWG NO.	714-1344	REV. A	TITLE

- Only trained, competent personnel may install, operate and maintain the equipment.
- For product training please contact GE Customer Support Center:
 - U.S.A
The Boston Center
1100 Technology Park Drive
Billerica, MA 01821
U.S.A
Tel: 800 833 9438 (toll-free)
978 437 1000
E-mail:sensing@ge.com
 - Ireland
Sensing House
Shannon Free Zone East
Shannon, County Clare
Ireland
Tel: +35 361 470200
- The product is an electrical apparatus and must be installed in the hazardous area in accordance with the requirements of the EC Type Examination Certificate. The installation must be carried out in accordance with all the appropriate international, national and local standard codes and practices and site regulations for Intrinsically Safe apparatus and in accordance with the instructions contained in the manual. Access to the circuitry must not be made during operation.
- The maximum operating pressure for the oxy.IQ is 10psi. Be sure the sample conditioning system is designed to maintain the oxy.IQ pressure below these limits, and that the oxy.IQ outlet is vented to atmosphere during operation and calibration.
- WARNING – Substitution of components may impair Intrinsic Safety.
- WARNING – To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing.
- AVERTISSEMENT - Pour éviter l'inflammation d'atmosphères inflammables ou combustibles, débrancher l'alimentation avant l'entretien.
- AVERTISSEMENT - Remplacement des composants peut compromettre la sécurité intrinsèque.
- Equipment is not intended for the measurement of oxygen in fluid of liquid phase


Special Conditions of Safe use

1. The Model oxy.IQ will not pass the 500V dielectric test. This must be taken into account upon installation.

oxy.IQ	GE Sensing 1100 Technology Park Drive Billerica, MA 01821			Oxy.IQ Safety Manual
MODEL	DWG NO.	714-1344	REV. A	TITLE

Markings

Markings shall appear on the oxy.IQ as shown below for the Intrinsically Safe version of the product.

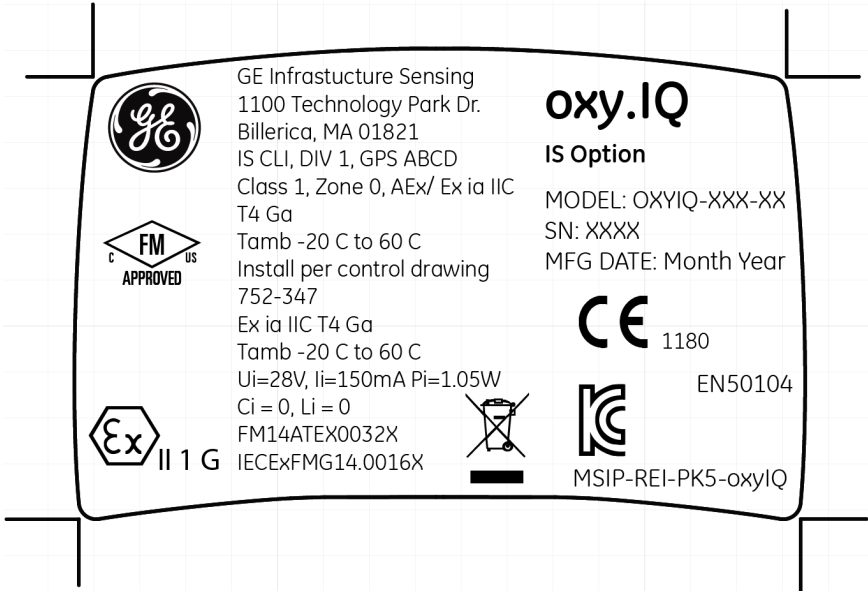


Connection and Wiring Diagram

Connection and Wiring Diagram




oxy.IQ	GE Sensing 1100 Technology Park Drive Billerica, MA 01821			Oxy.IQ Safety Manual
MODEL	DWG NO.	714-1344	REV. A	TITLE

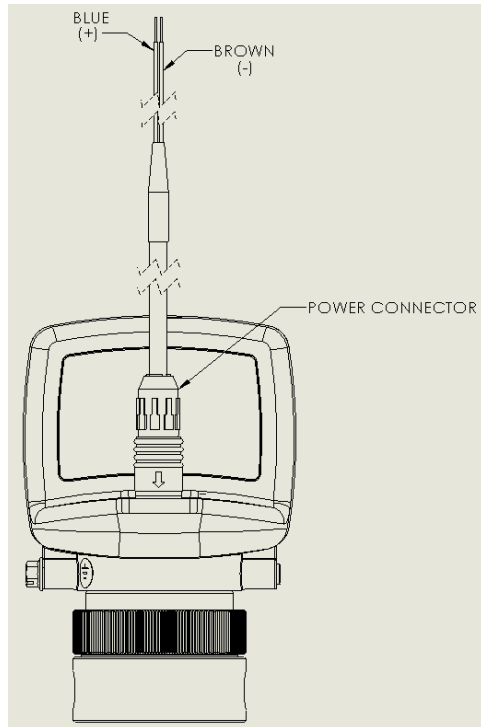Power Requirements:**Nominal Operating Parameters: 28VDC at 50mA**

[no content intended for this page]

Addendum B. Declaration of Conformity

 Declaration of Conformity <i>OxyIQ Oxygen Transmitter</i>	No. DOC-0046	Rev A	Page 1 of 1
		Name: GTK	
	Approved: GTK		
<u>Revision</u>	<u>Name</u>	<u>Approved</u>	<u>Description</u>
A	G. Kozinski	G. Kozinski	DoC

Declaration

We,

GE Sensing
 1100 Technology Park Drive
 Billerica, MA 01821 U.S.A.

Declare in sole responsibility that the equipment to which this declaration applies is in conformity with the following directives and standards:

2004/108/EC and Amendments EMC Directive
 EN 61326-1:2006

Manufacturer

GE Sensing
 1100 Technology Park Drive
 Billerica, MA 01821 U.S.A.

Equipment

Oxy.iQ Oxygen Transmitter

Environmental and Use Conditions

Industrial Applications

Certification type and Marking



Issue Date

June, 4, 2013

Signatory



Ted Furlong
 Chief Consulting Engineer
 GE Measurement & Control
 Billerica, MA USA

June 6 2013

Date

[no content intended for this page]

Customer Support Centers

U.S.A.

The Boston Center
1100 Technology Park Drive
Billerica, MA 01821

U.S.A.

Tel: 800 833 9438 (toll-free)
978 437 1000

E-mail: sensing@ge.com

Ireland

Sensing House
Shannon Free Zone East
Shannon, County Clare
Ireland

Tel: +35 361 470200

E-mail: gesensingsnnservices@ge.com

An ISO 9001:2008 Certified Company

www.ge-mcs.com/en/about-us/quality.html

www.ge-mcs.com

©2015 General Electric Company. All rights reserved.
Technical content subject to change without notice.